

Wiring Cross Reference

HONEYWELL **BC7000L / PM720G2005**
 TO **YB110xx¹, BLL510, YP200** (Notes 1 & 3), **60-2814-1**.

¹Refer to Amplifier and Scanner Reference Guide

Honeywell	Function	Fireye	
L1	Hot – 120 VAC	L1	
L2	Ground – Neutral	L2	
F	Scanner	S1	
G	Scanner	S2	
L1 – 16	Operating Control	L1 – 3	
16 - 4	Pre-Ignition Interlocks Fuel Valve Interlock	L1 – 13	Note 4
16 – 3	Running Interlocks (Air Flow Switch)	3 – P	
5	10 Sec – Interrupted Pilot	5	
6	15 Sec – Interrupted Pilot	6	Note 2
18	5 Sec – Early Spark Termination	5	Note 1
7	Main Fuel Valve	7	
8	Blower Motor	M	
8 – 13	Low Fire Start Switch	M – D	
9	Alarm	A	
	Modulation Circuit		
10	High Fire	X	
11	Common	10	
12	Auto	11	
14	Low Fire	12	

Note 1	If terminal 18 (early spark termination) is used, set PTFI*MTFI Timings in PROGRAM SETUP sub-menu.
Note 2	MTFI timing greater than 15 seconds is not available with BurnerLogix.
Note 3	Purge time is set in the PROGRAM SETUP sub-menu
Note 4	Identify and isolate indicated switch and rewire to appropriate Fireye terminals.

Refer to Bulletin BL-1001 for correct amplifier selection, proper installation, grounding, operational and safety checkout procedures. Perform safety checks of the entire system prior to allowing fuel entry into boiler. Complete safety checks, flame signal levels, minimum pilot tests with fuel on.