

Wiring Cross Reference

HONEYWELL RM7890A 1015
TO MEC120, MEP100, MERT1, 61-3060 or
MC120, MP100, MART1T, 61-3060 or
Refer to Amplifier and Scanner Reference Guide

Honeywell	Function	Fireye
3	Hot – 120 VAC	1
2	Ground – Neutral	2
6	Limits, Controller	1-7
	JUMPER	7-6
	Burner Motor	8
10	Ignition	4
8	Intermittent Pilot	3
9	Main Fuel	5
4	Alarm	A
F	Scanner	S2
G	Scanner	S1

Refer to bulletin MC-5000 for detailed operation.