



Fireye[®] FLAME SCANNERS

UV Non Self-Checking Scanner Models:
UV7A4-1-CEX

DESCRIPTION

The non self-check UV7A4-1-CEX is used with the MBSERIES Multi-Burner control, the SBSERIES single burner control and the flame sensing modules, MBPF-100S and MB-600PF.

The UV7A4-1-CEX scanner features high sensitivity ultraviolet (UV) for monitoring gas or oil flames which cycle on and off frequently. The Fireye flame safeguard checks for a short-circuited, or "runaway" scanner at the beginning and end of each flame cycle. The scanner is UL listed and FM approved. It comes with 6" pigtail leads, 1/2" N.P.T. for conduit connection, 1" N.P.T for mounting and is ideal for CEX high temperature applications.

The UV tube is made of quartz and is filled with a gas that ionizes when struck by UV radiation from the flame. In the absence of UV radiation, the gas acts as an insulator between two electrodes which are mounted inside the tube. These electrodes are energized continuously by a high voltage. During combustion, UV radiation ionizes the gas, causing current pulses to flow between the electrodes. These current pulses result in a flame signal which is transmitted to the amplifier in the control, where it is processed to energize or hold in the flame relay.



WARNING: When installing or replacing UV scanners, a minimum pilot turndown test on pilot ignited burners and a spark pickup test on all burners must be performed.

APPLICATION

UV scanners are recommended for detecting flames from standard fuel gases, some waste gases and light oil fuels such as No. 2 oil. Flames from heavier oils can be detected with UV scanners but the unburned fuel shroud and/or atomization shroud can block passage of the UV from the flame zone to the UV tube, causing nuisance burner/boiler trips. Infrared detection is recommended for fuel oil heavier than No. 2, and some installations where waste gases are burned together with natural gas as a main flame.

NOTE: Certain safety codes and regulations require the use of self-checking ultraviolet scanners.



The UV7A4-1-CEX must be installed in compliance with all applicable codes and standards (e.g. suitable protective conduit, etc) in order to maintain Hazardous Location Rating



HAZARDOUS LOCATION

In order to maintain the explosion proof rating (see below) of the UV7A-1-CEX scanner, the flame scanner **MUST BE MOUNTED** on a 1 inch sight pipe on the boiler.

To assure that the hazardous location protective feature of the scanner housing is effective, it must be mounted to the combustion chamber in a manner such that its internal circuits are not exposed to the atmosphere of the hazardous location it is intended to protect.

Hazardous Location - CENELEC Standard:

Exd IIC T6

Where: "Ex" indicates the housing corresponds to a CENELEC Standard
"d" indicates type of protection (flameproof)
"IIC" indicates Gas Group
"T6" indicates the temperature class.



SPECIFICATIONS

UV7A4-1-CEX

Supply	425 VDC \pm 25 VDC
Discharge Current	0.3 mA
Supply Wiring	two #18 AWG conductors, 6" long
Max Operating Distance	76m (250 ft.)
(Total Wire Length)	
Temperature Range	-20° to +125°C (-4° to 257°F)
Shipping Weight	1.4 kilograms (3 lbs.)

IMPORTANT NOTE

The information provided in this bulletin is directed to assist boiler and combustion service technicians who are experienced in the installation and operation of Fireye Flame Safety equipment. Persons not familiar with Fireye products should contact the nearest Fireye representative or other qualified service group.

The UV7A4-1-CEX as well as all other Fireye scanners, are designed to be used exclusively with the appropriate Fireye Flame safeguard and Burner Management controls. The application of these scanners to equipment other than Fireye should be reviewed for approval by Fireye.


INSTALLATION OF UV SCANNERS



WARNING: THE LEADS FROM THE UV7A4-1-CEX SCANNER TO THE CONTROL MUST BE SHIELDED TO PREVENT ELECTRICAL NOISE FROM GENERATING A FALSE FLAME SIGNAL TO THE CONTROL.

Where possible, obtain the Burner Manufacturer's Instructions for mounting the scanner. This information is available for most standard burners. The scanner mounting should comply with the following General Instructions:

1. The quartz UV tube is brittle. Care must be exercised to avoid dropping or otherwise striking the scanner with force. Keep the scanner protected until mounted.
2. Position the UV scanner within 36 inches of the flame to be monitored.
3. Select a scanner location that will remain within the ambient temperature limits of the UV Scanner (200°F).
4. The unit should be installed in accordance to local codes and standards..

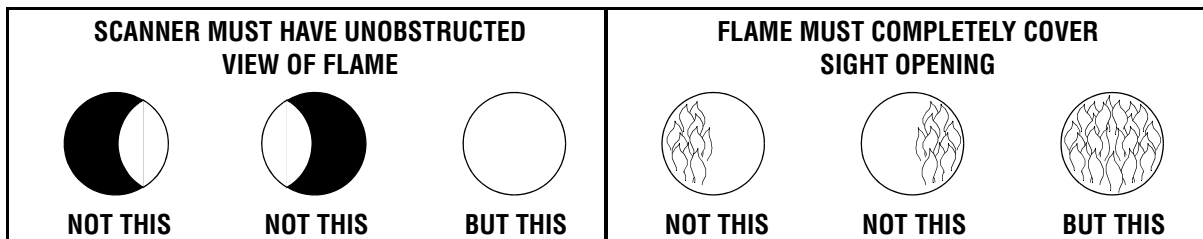

5. Since the radiated energy from an electric spark ignitor is very rich in the UV region, the field of view should be aimed so that it does not see an electric spark ignitor nor any reflector that is close to the spark. To prevent spark pickup by the UV detector, close and/or disconnect all pilot and main fuel valves. Operate the control through a burner startup cycle to determine that ignition spark cannot be detected. Burner will not ignite if spark is detected.



CAUTION: The unprotected leads must be run in electrical conduit in order to eliminate pickup of electrical noise which could present an unsafe condition.

6. Avoid running the scanner cables or conduit in close proximity to hot surfaces at the burner.
7. Avoid running the scanner conduit in close proximity to high energy ignition wires.
8. Smoke or unburned combustion gases absorb ultraviolet radiation. On installations having negative pressure combustion chamber, a small hole drilled in the scanner sight pipe will assist in keeping the pipe clean and free of smoke. For positive pressure furnaces, provide clean air to pressurize the sight pipe, if necessary.
9. Two UV Scanners may be installed on one burner if it is necessary to view two areas to obtain reliable detection of the flame. They should be wired in parallel.
10. Request the assistance of any Fireye Field Office for recommendations of a proper scanner installation on a non-standard application.




CAUTION: Ultraviolet tubes can simulate flame when exposed to high levels of "X" and GAMMA radiation. The table below indicates the maximum dose of radiation that a UV tube can be exposed.

SOURCE	MAXIMUM DOSE	
Cobalt 60 (CO ₆₀)	7.5mR/Hr	
Iridium (IR ₁₉₂)	1.0mR/Hr	
X-Ray	4mR/Hr	150kV @ 0.2mA
X-Ray	1mR/Hr	150kV @ 0.4mA

Minimum Pilot Test

This test assures that the flame detector will not detect a pilot flame too small to reliably light off the main flame. The test should be made on every new installation and following any repositioning of the flame detector. **THE MINIMUM PILOT TESTS MUST BE ACCOMPLISHED BY A TRAINED AND QUALIFIED BURNER TECHNICIAN.**

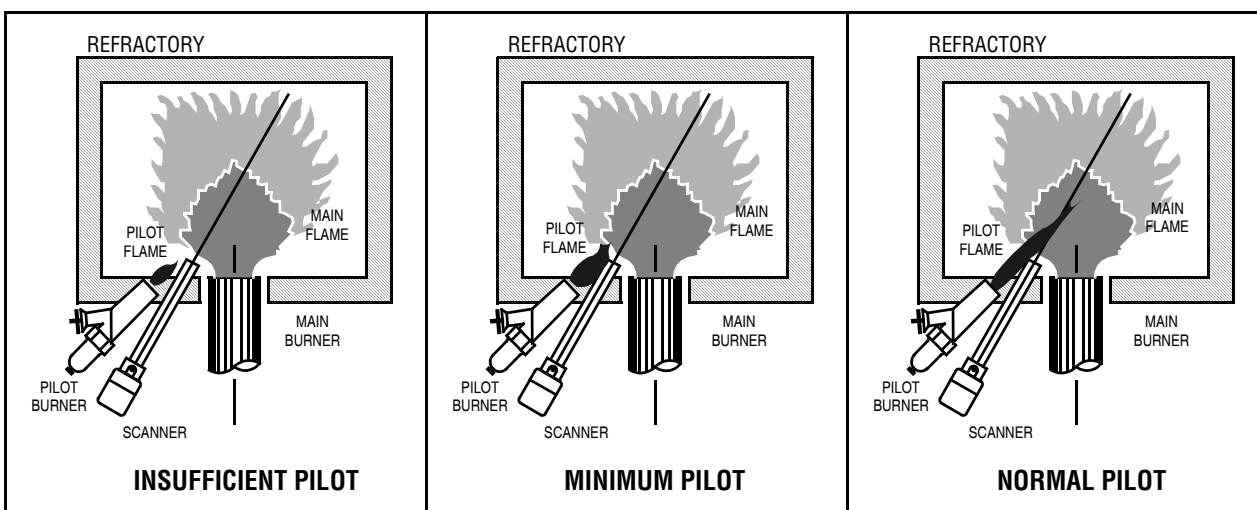

SPARK REJECTION TEST. CAUTION: The scanner must not sight the ignition spark directly or any part of the burner that can reflect the spark back to the scanner. the scanner must not see a pilot flame that is too small to reliably ignite the main flame. Test procedures vary according to the control used. See procedures as described in the technical bulletin for the control being installed.

WIRING – UV SCANNERS



Incorrect sensor installation may cause the sensor to generate a false flame signal. This can cause unburned fuel to collect in the combustion chamber, resulting in explosions, injuries, and property damage. Be certain that the flame sensor detects only the pilot and main flames, not glowing refractory or burner parts.

1. Route sensor wiring a sufficient distance from ignition and other high voltage wiring to avoid electrical interference.
2. If sensor wiring is to extend beyond the factory-supplied cable length, use #14 to #18 AWG wire suitable for 75°C (167°F) and 600 volt insulation, and run each pair of leads in its own conduit or shielded cable. Multiple shielded cables can be run in a common conduit, but only on short distances.



3. Depending on field conditions, sensor wiring can be up to 76.25 m (250 ft.) for UV scanners. For extended scanner wiring up to 500 feet, or for shorter lengths to reduce signal loss, use a shielded wire (Belden 8254, RG-62/U coaxial cable, or equal) for each scanner wire. The ends of the shielding must be taped and not grounded.
4. Asbestos insulated wire should be avoided.
5. Multi conductor cable is not recommended.
6. High voltage ignition wiring should not be installed in the same conduit with flame detector wires.

MAINTENANCE

Ultraviolet Scanners

The viewing area of the scanner must be kept clean. Even a small amount of contamination on the lens will reduce the flame signal reaching the detector by a measurable amount. Wipe the viewing area routinely using a soft cloth dampened with concentrated detergent, then wipe dry.

Flame Signal Strength

Routine observation of the flame signal strength will forewarn any deterioration in the capability of the flame detector or its application.

Periodic Safety Check


It is recommended that a procedure be established to test the complete flame safeguard system at least once a month. This test should verify the proper operation of all limit switches and safety interlocks as well as flame failure protection and fuel safety shutoff valve tightness.

Rotation


It is recommended that control and scanner units purchased as spares be installed periodically to ensure proper operation.

DIMENSIONS

60-2733-5 Replacement element

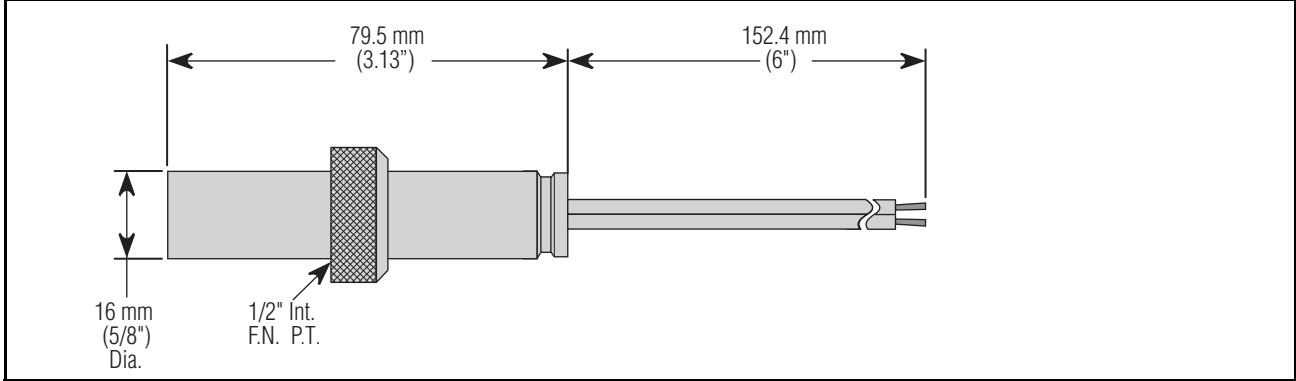

UV7A4-1-CEX

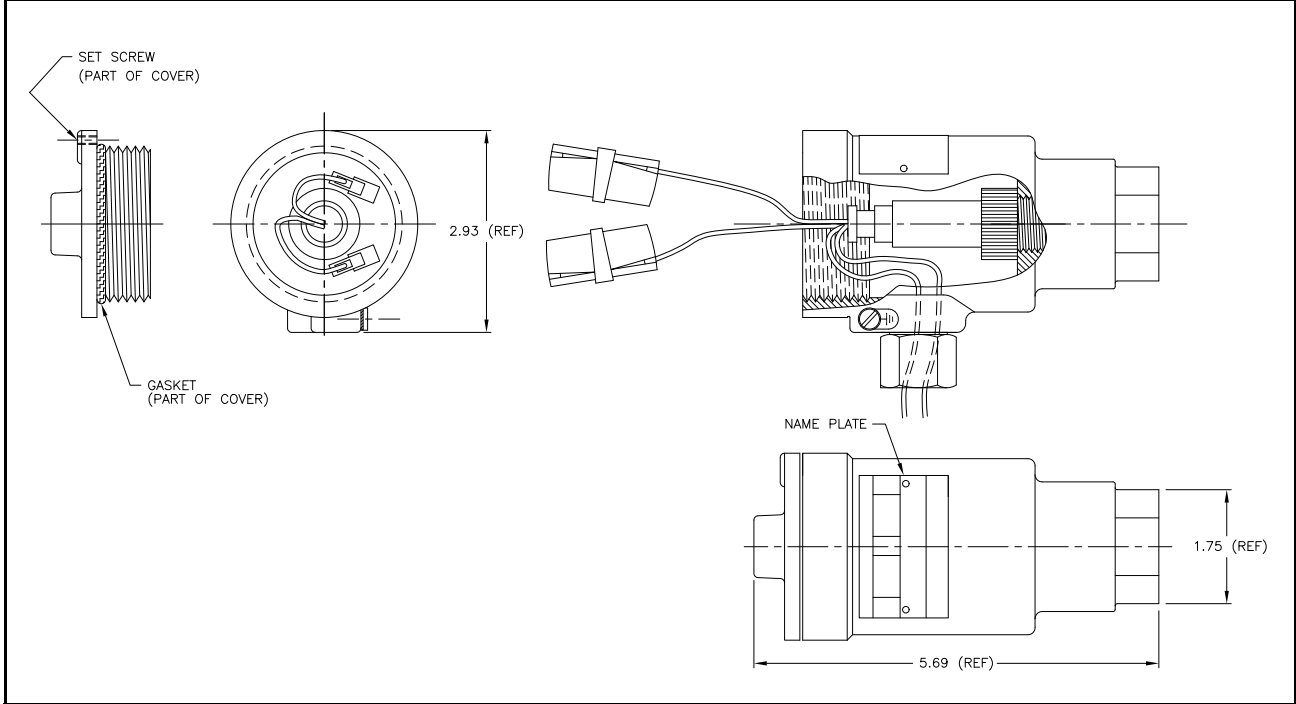



NOTICE

When Fireeye products are combined with equipment manufactured by others and/or integrated into systems designed or manufactured by others, the Fireeye warranty, as stated in its General Terms and Conditions of Sale, pertains only to the Fireeye products and not to any other equipment or to the combined system or its overall performance.

WARRANTIES

FIREYE guarantees for *one year from the date of installation or 18 months from date of manufacture* of its products to replace, or, at its option, to repair any product or part thereof (except lamps, electronic tubes and photocells) which is found defective in material or workmanship or which otherwise fails to conform to the description of the product on the face of its sales order. **THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES AND FIREYE MAKES NO WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED.** Except as specifically stated in these general terms and conditions of sale, remedies with respect to any product or part number manufactured or sold by Fireeye shall be limited exclusively to the right to replacement or repair as above provided. In no event shall Fireeye be liable for consequential or special damages of any nature that may arise in connection with such product or part.



FIREYE®
3 Manchester Road
Derry, New Hampshire 03038 USA
www.Fireeye.com

SC-109
APRIL 17, 2015