




BD-5001
October 24, 2023

BLV512 BLL510

DISPLAY MODULES FOR USE
WITH THE FIREYE

BurnerLogix™ CONTROL SYSTEM

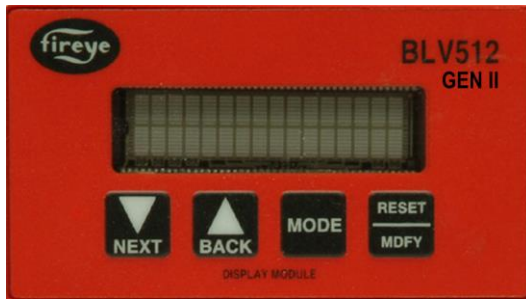

DESCRIPTION

The BurnerLogix system offers optional OLED and liquid crystal (LCD) displays that may be either plugged in or mounted remotely to give full language descriptors of current status and diagnostic lockout information.

In order to change the factory default parameters stored in the programmer module an optional keypad/display (BLV512 or BLL510) is required. All configurable parameters are stored within the PROGRAM SETUP sub-menu. The keypad/display module provides tactile feedback keys that are used to access the sub-menus inherent in the BurnerLogix system.

The optional alpha-numeric display is made up of 2 lines by 16 characters per line and is available in either OLED or liquid crystal formats. The advantage of OLED is high brightness and extended temperature range to -40°F. Both displays contain a fully functional keypad allowing the user to easily scroll through the various menus to view the current operating status, review programmer configuration, and lockout history.

When mounted remotely using kits 129-178-4 or 129-178-8, each display meets NEMA 4X requirements. Refer to instruction sheet 133-675 for details.

INSTALLATION PROCEDURE

The display module is held into the BurnerLogix chassis/amplifier by mounting tabs designed into the display housing.

Using the thumb and index finger, grasp the left and right edges of the blank display module and pull forward until removed. Insert one end of the supplied 4-inch display cable into the jack located in the back of the display module. Plug the other end of the cable into the jack located inside the chassis/amplifier module.


Using the thumb and index finger, grasp the left and right edges of the blank display module and insert it into the compartment of the chassis/ amplifier module. Push the unit into the unit until a positive click is realized.



Refer to bulletin BL-1001 for complete information.



Keypad Description

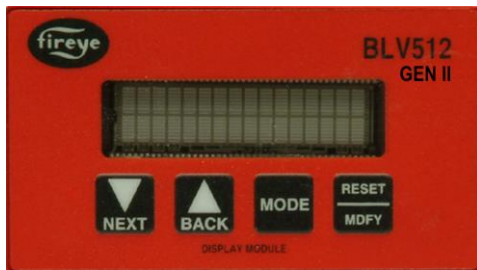

The NEXT key is used to scroll down through the various menus and is also used to increment the value when in the modify mode. The BACK key is used to scroll up through the menus and is also used to decrement the value when in the modify mode. The MODE key is used to enter a sub-menu when the displayed item indicates a sub-menu with a right facing arrow and to exit the sub-menu and move on to the next main menu item.

The RESET/MDFY

key is used to reset the BurnerLogiX from a lockout condition, force a recycle of the programmer, indicate to the system the value displayed is to be modified or when done with the modification.

List of display of main menu items in BurnerLogiX:

L1-3 OPEN	current operating status
BNR HOURS	total hours terminal 7 (main fuel) is energized.
BNR CYCLES	total burner cycles.
BNR LOCKOUTS	total system lockouts.
SYS HOURS	total hours installed.
PROGRAM SETUP >	review and set program parameters.
LOCKOUT HISTORY >	last 10 lockouts with burner hour and cycle time stamp.
SYSTEM INFO >	view flame signal averages, M-D and M-8 status, select. language, clear history feature.

TO VIEW AND MODIFY A PROGRAMMABLE PARAMETER:

On display module BLV512 or BLL510, use the NEXT or BACK key to scroll to PROGRAM SETUP. Press the MODE key to enter the submenu showing all program setup parameters. Pressing the MODE key while in the sub-menu will exit the sub-menu, and the next main menu item will be displayed. While in the sub-menu, pressing the NEXT key will scroll forward through the sub-menu. Pressing the BACK key will scroll backward through the sub-menu. When a modifiable parameter is displayed, pressing the RESET/MDFY key will allow the displayed parameter to be modified. Use the NEXT or BACK keys to select the value to suit the application and when done, press the RESET/ MDFY to save the value to memory.

NOTICE

When Fireye products are combined with equipment manufactured by others and/or integrated into systems designed or manufactured by others, the Fireye warranty, as stated in its General Terms & Conditions of Sale, pertains only to the Fireye products and not to any other equipment or to the combined system or its overall performance.

WARRANTIES, EXCLUSIVE REMEDIES, AND LIMITATION OF DAMAGES

Fireye guarantees for one year from the date of installation or 18 months from the date of manufacture, whichever occurs first, to replace, or at its option, to repair any product or part thereof which Fireye, in its sole discretion, deems to be defective in material or workmanship or which otherwise fails to conform to the description of the product on the face of its sales order. Fireye's obligations pursuant to this warranty do not extend to any products or parts thereof which Fireye determines to have been installed, operated, maintained, repaired, or altered improperly or otherwise than in conformity to Fireye's applicable instructions, or which have been subject to misuse, accident, or neglect.

THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, BOTH EXPRESS AND IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. EXCEPT AS SPECIFICALLY STATED IN THESE TERMS AND CONDITIONS OF SALE, REMEDIES WITH RESPECT TO ANY PRODUCT OR PART MANUFACTURED OR SOLD BY FIREYE, OR WITH RESPECT TO ANY BREACH OF OR DEFAULT UNDER THIS CONTRACT (INCLUDING ANY BREACH OF WARRANTY), SHALL BE LIMITED EXCLUSIVELY TO THE RIGHT TO REPLACEMENT OR REPAIR F.O.B. FIREYE MAIN WAREHOUSE LOCATION, AS ABOVE PROVIDED. IN NO EVENT SHALL FIREYE BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY NATURE WHICH MAY ARISE IN CONNECTION WITH SUCH PRODUCT OR PART OR ANY BREACH OF OR DEFAULT UNDER THIS CONTRACT. TO THE EXTENT PERMITTED BY LAW, THE AGGREGATE LIABILITY OF FIREYE HEREUNDER WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, WILL BE LIMITED TO ONE TIMES THE CONTRACT VALUE, PROVIDED HOWEVER THE FOREGOING LIMITATION DOES NOT LIMIT THE LIABILITY OF FIREYE FOR ANY INJURY TO, OR DEATH OF A PERSON, CAUSED BY THE GROSS NEGLIGENCE OF FIREYE.