




BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Interrupted Pilot

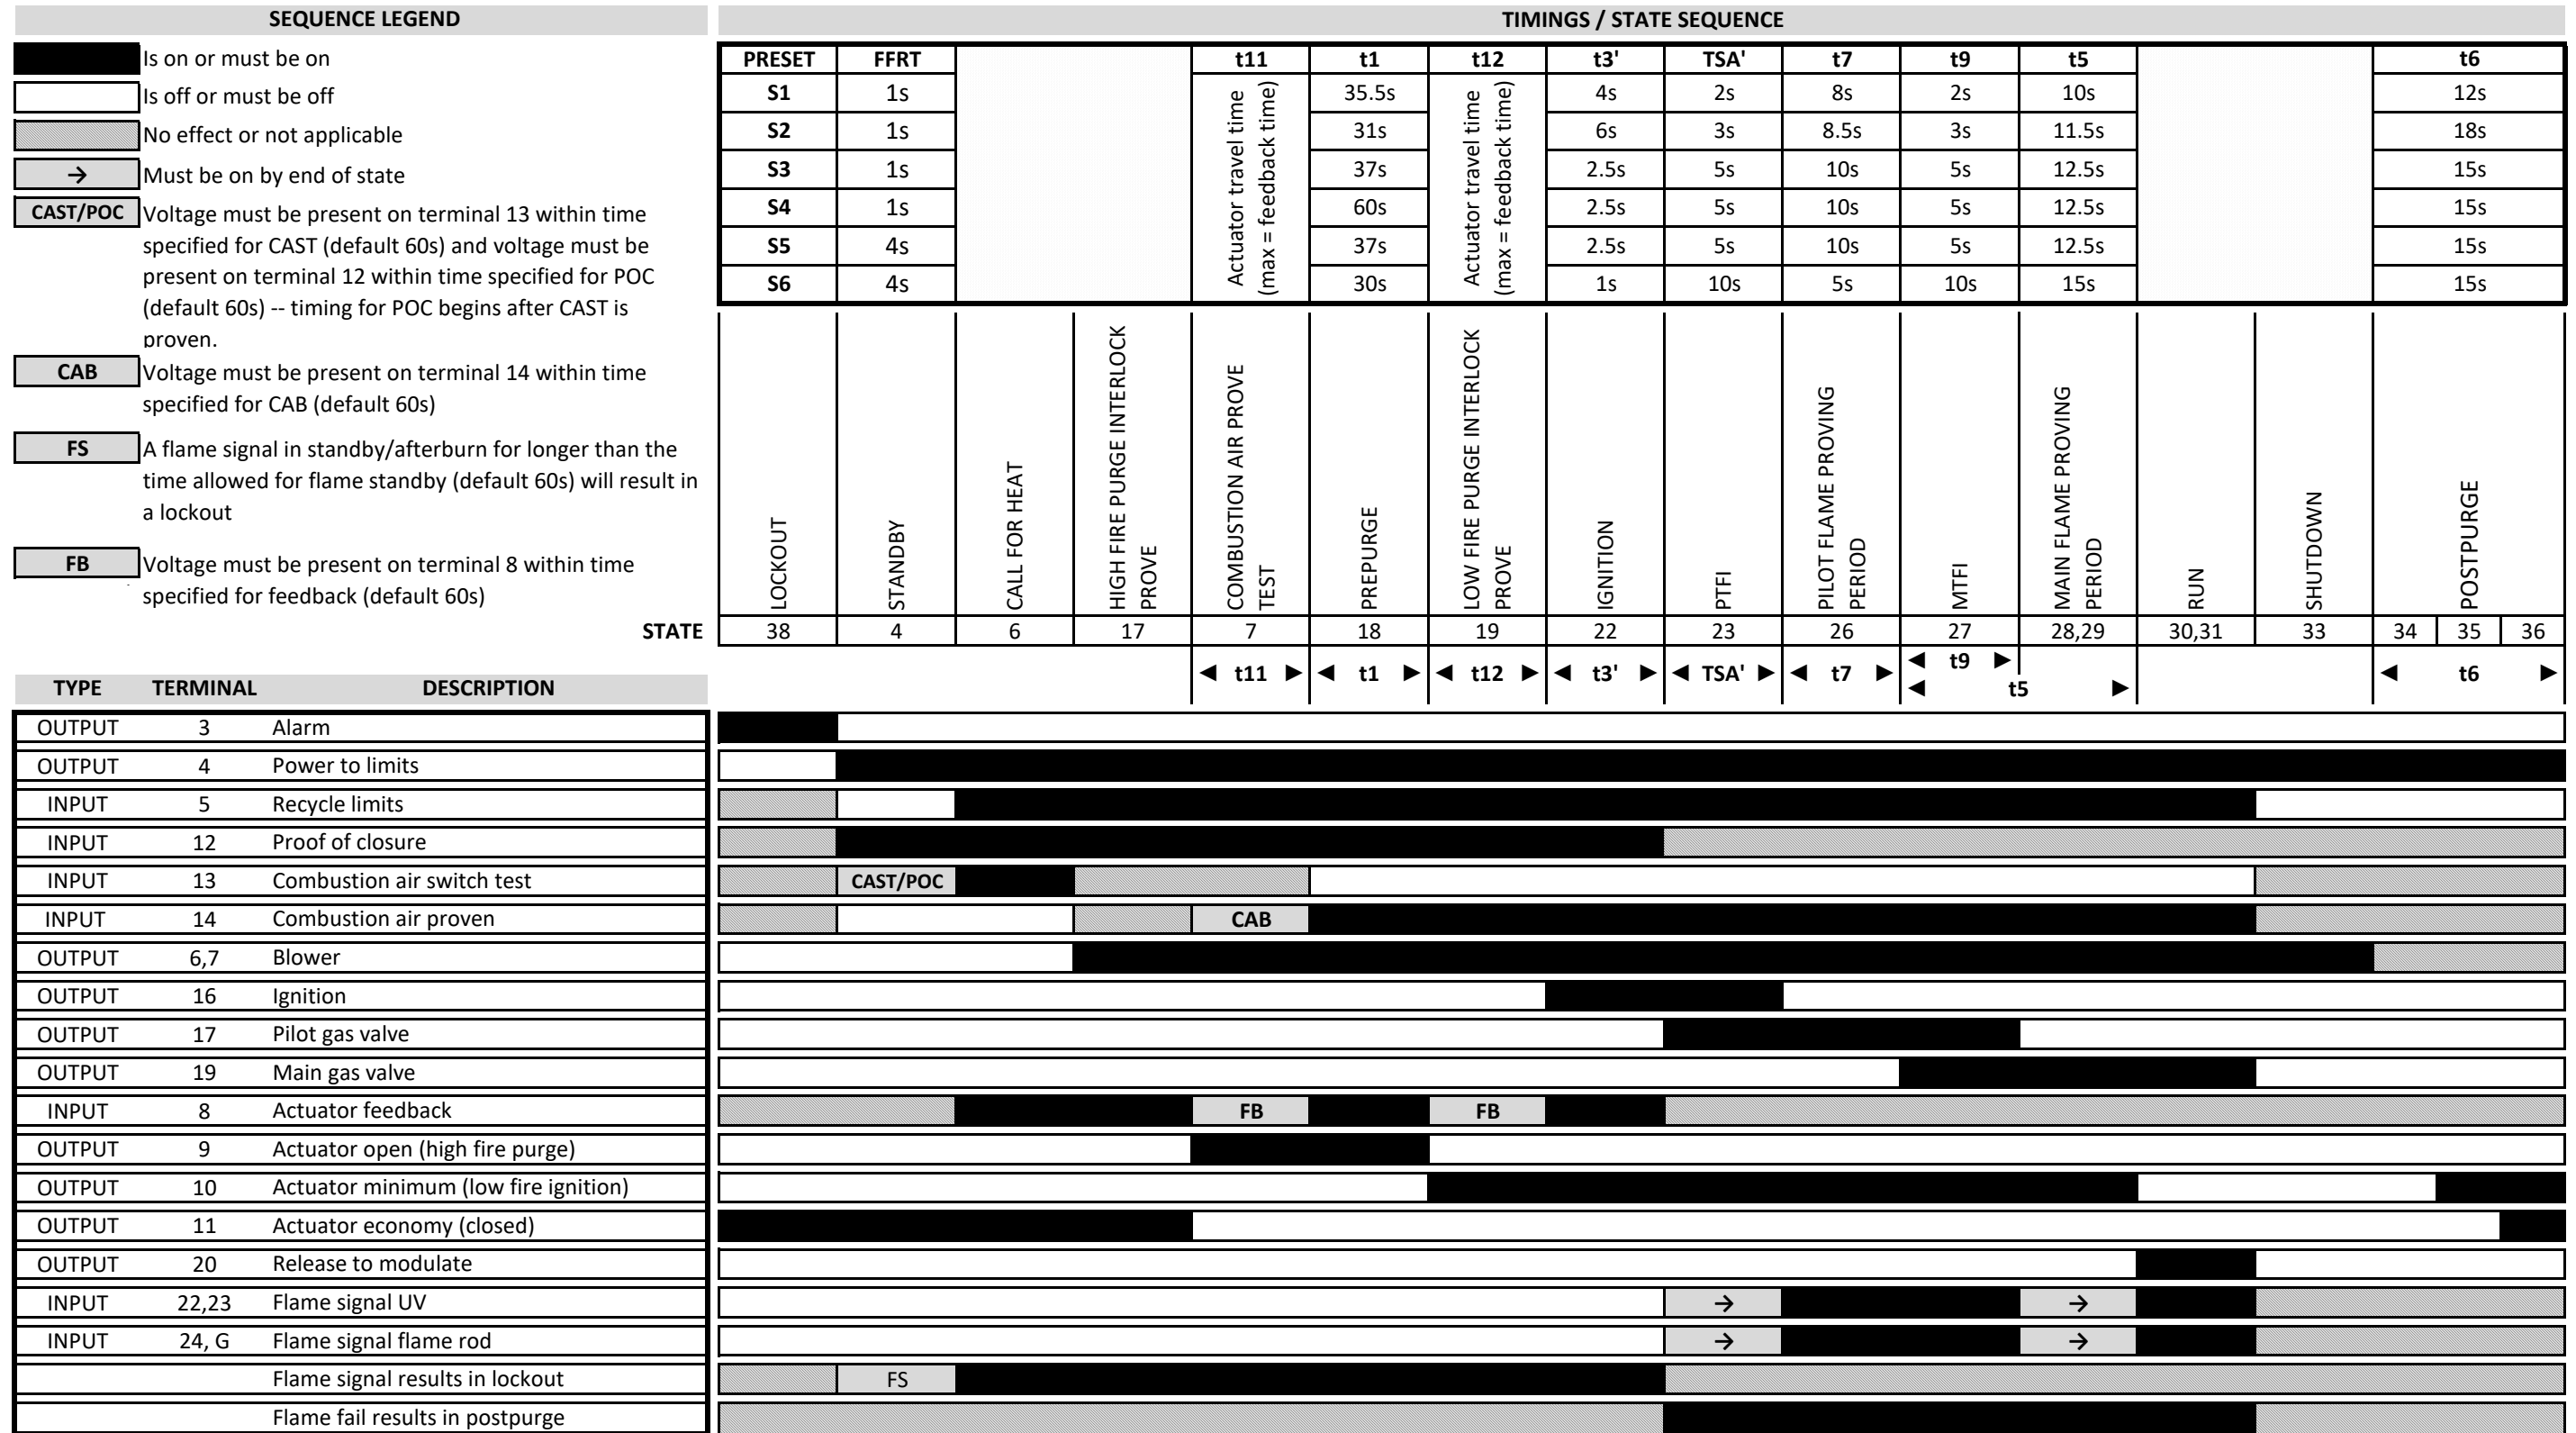

BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Intermittent Pilot

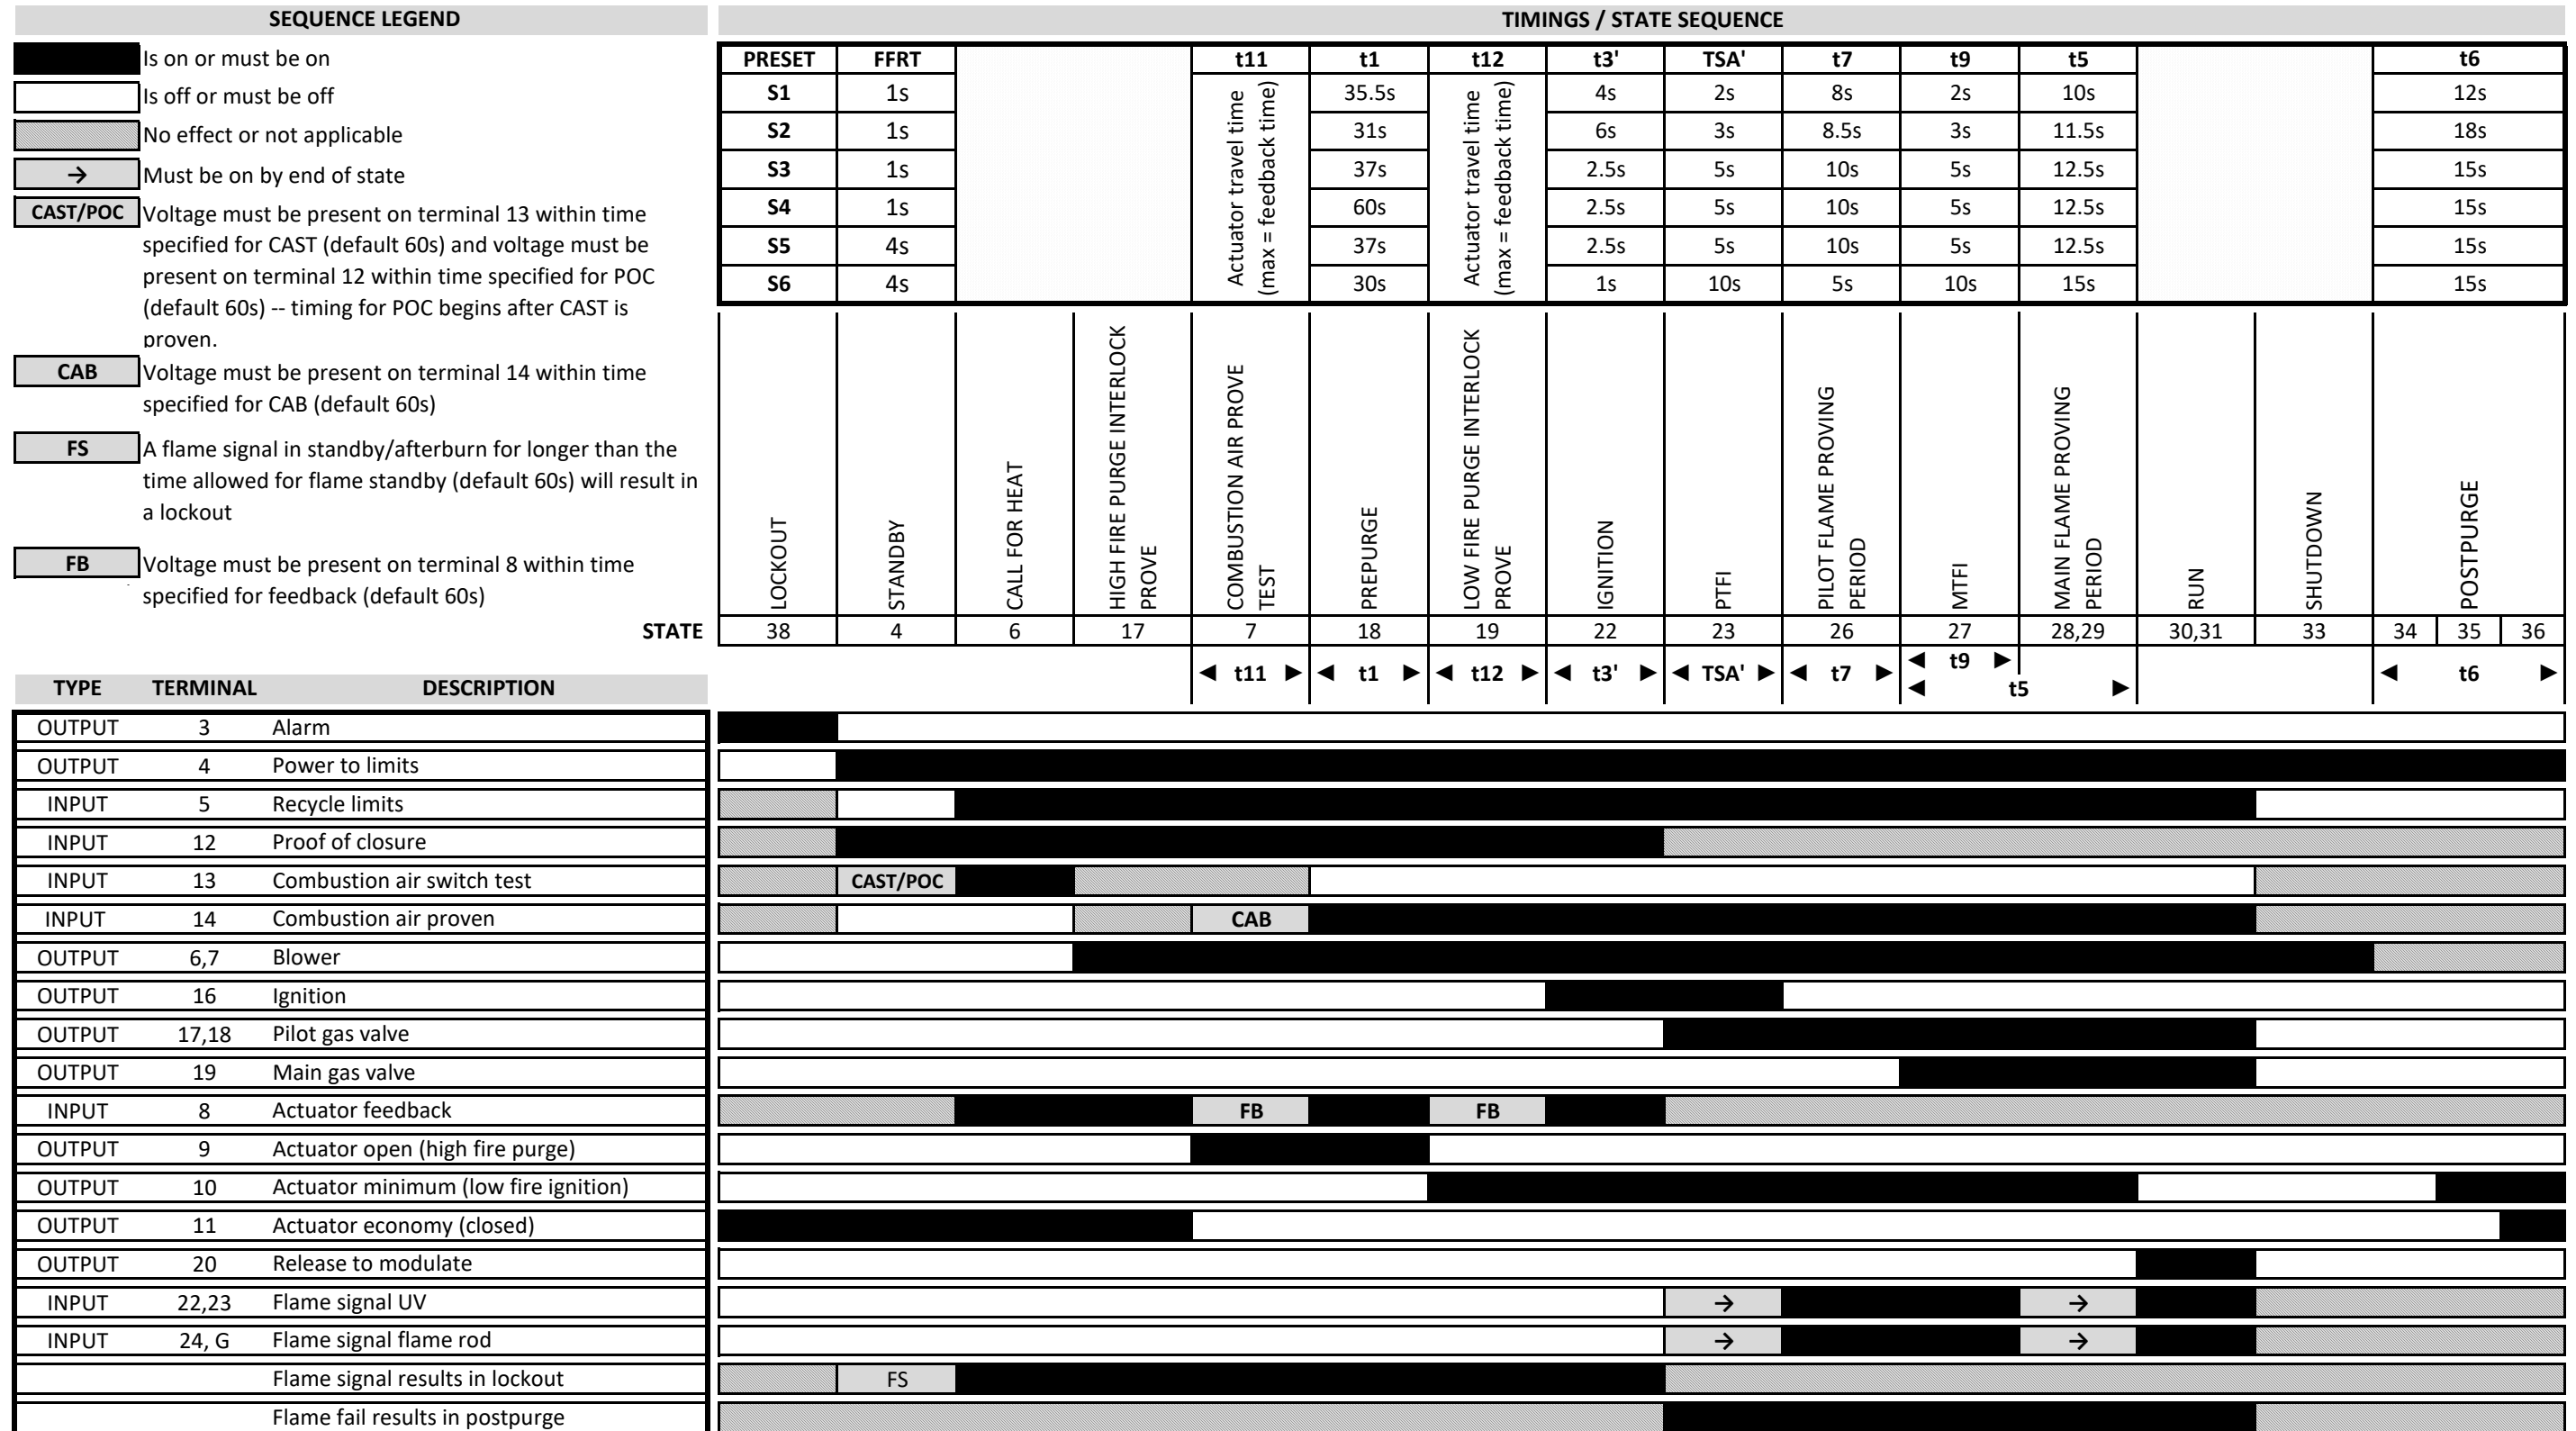

BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Intermittent Pilot (Industrial Application)

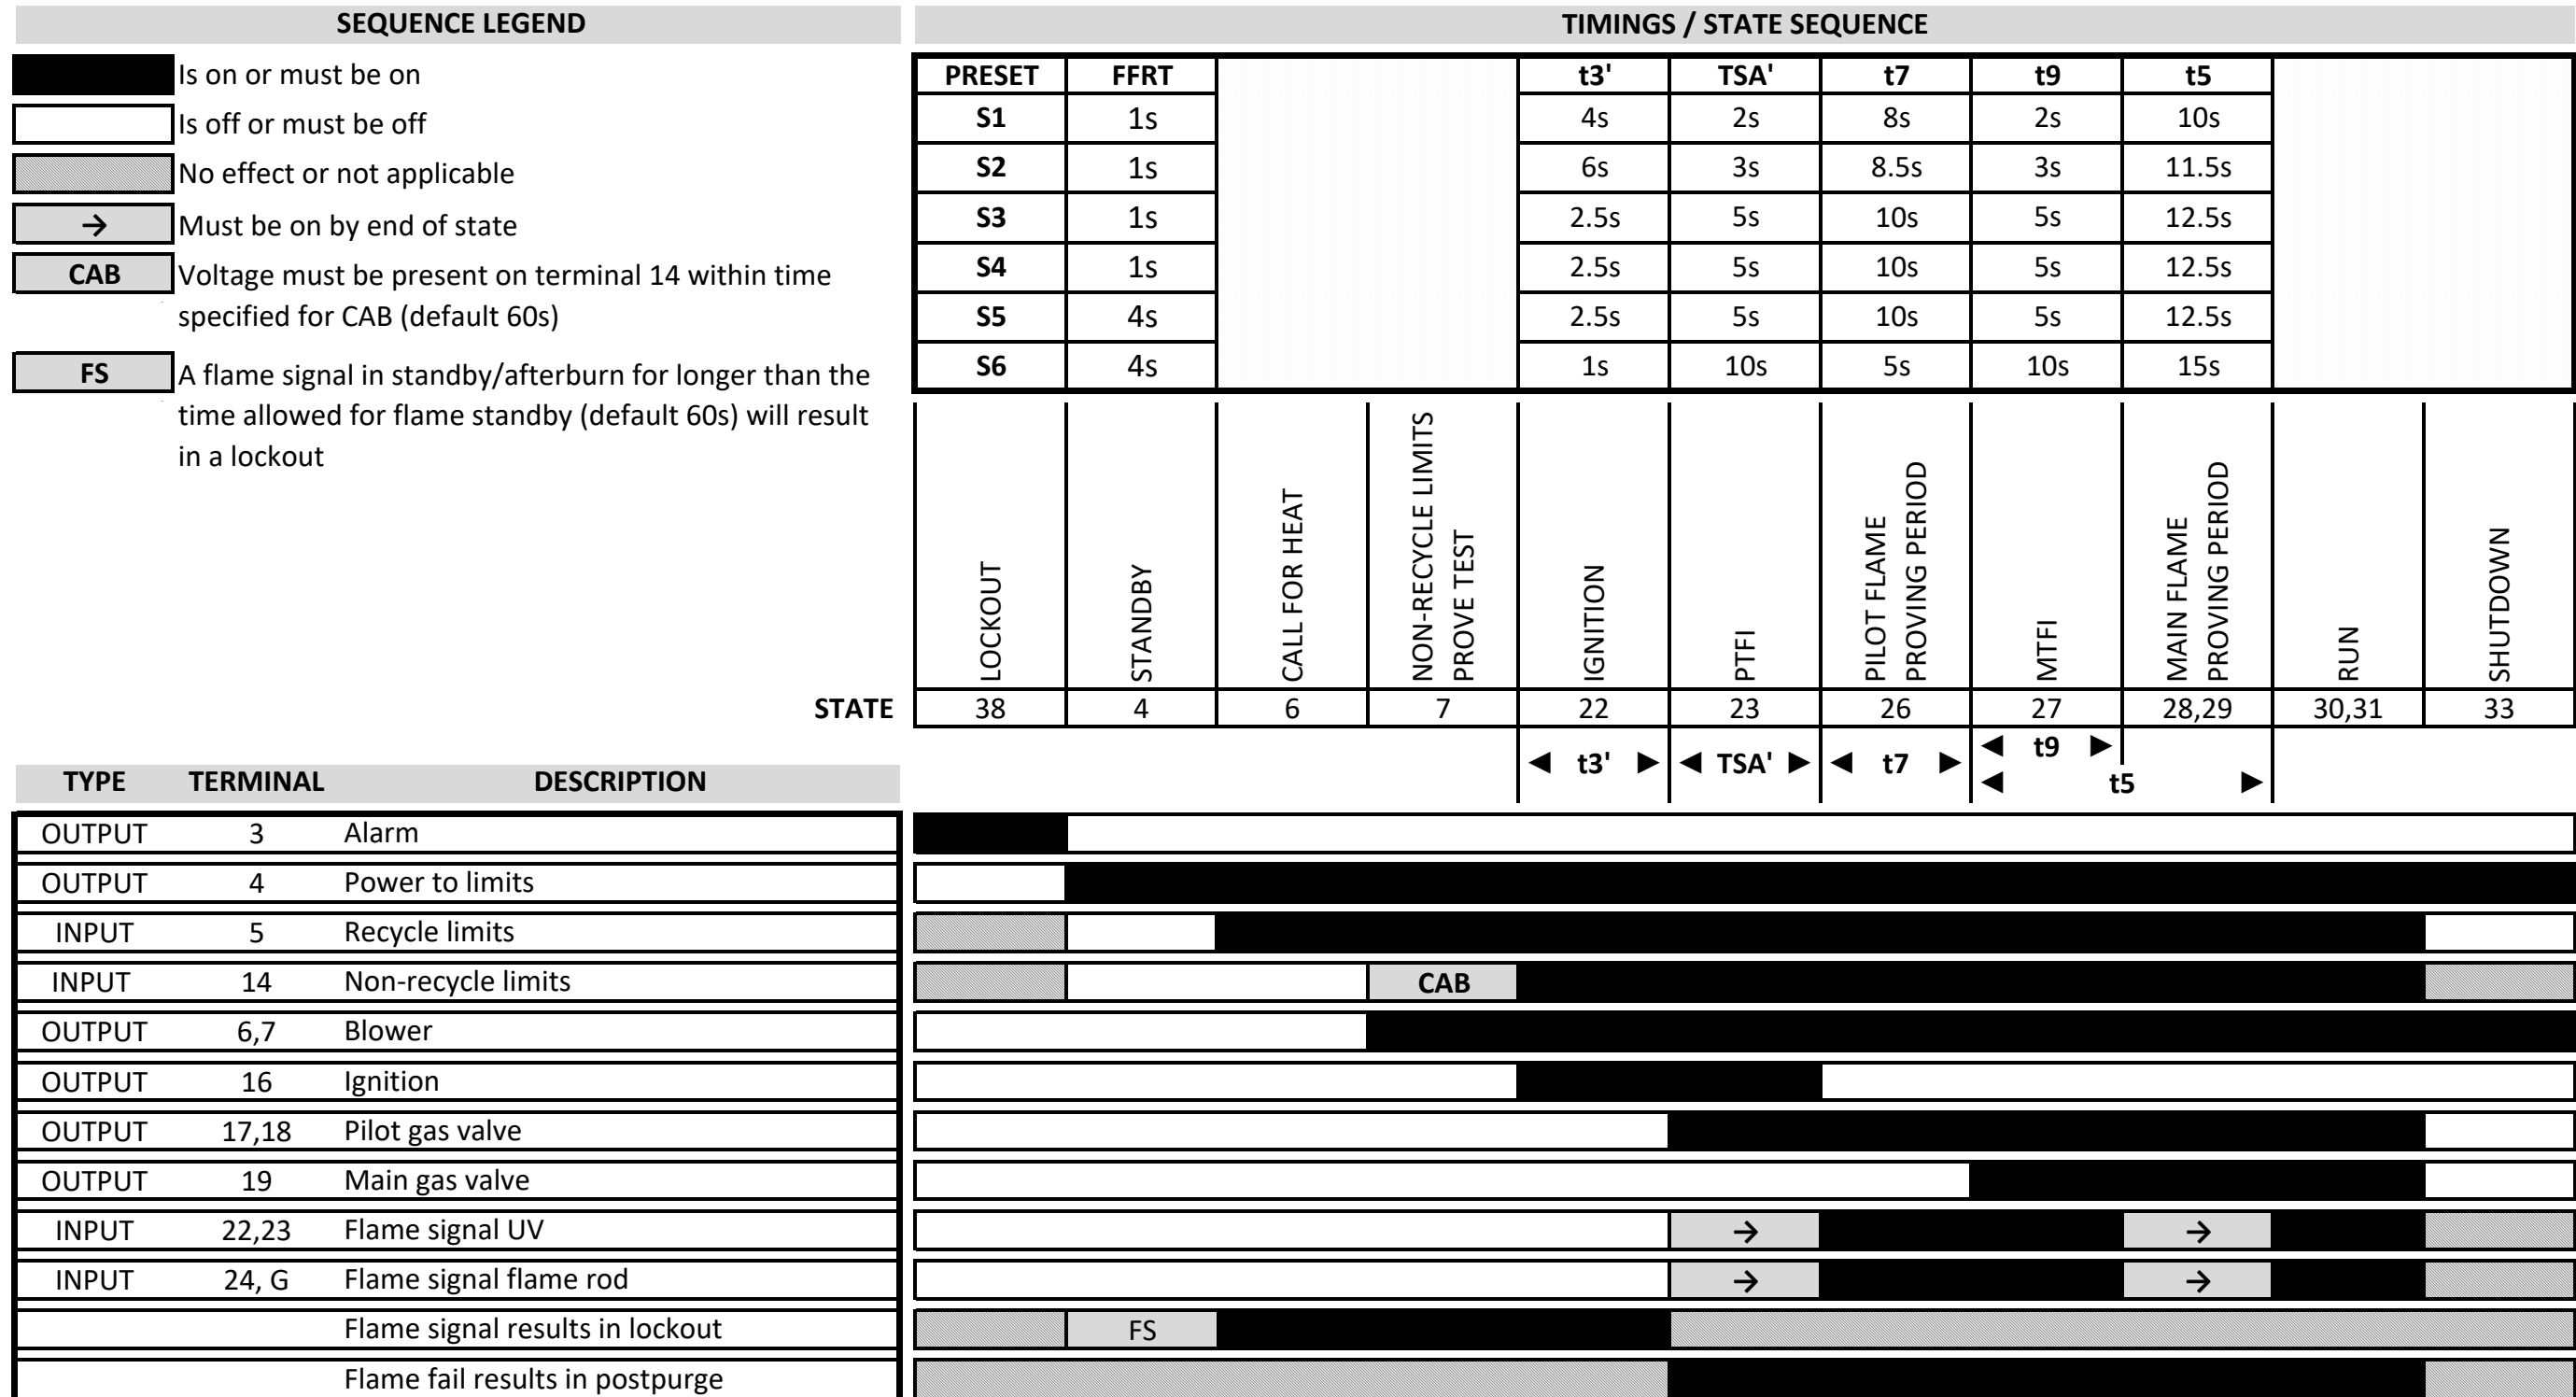

WIRING NOTES: Jumper terminal 11 to 12 to disable CAST (combustion air switch test), terminal 5 to 12 to disable POC (proof of closure), terminal 5 to 8 to disable actuator control and terminal 4 to 15 to disable purge. Optional: Jumper terminal 13 to 15 to disable prepurge only or terminal 14 to 15 to disable postpurge only.

