




### BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Interrupted Pilot

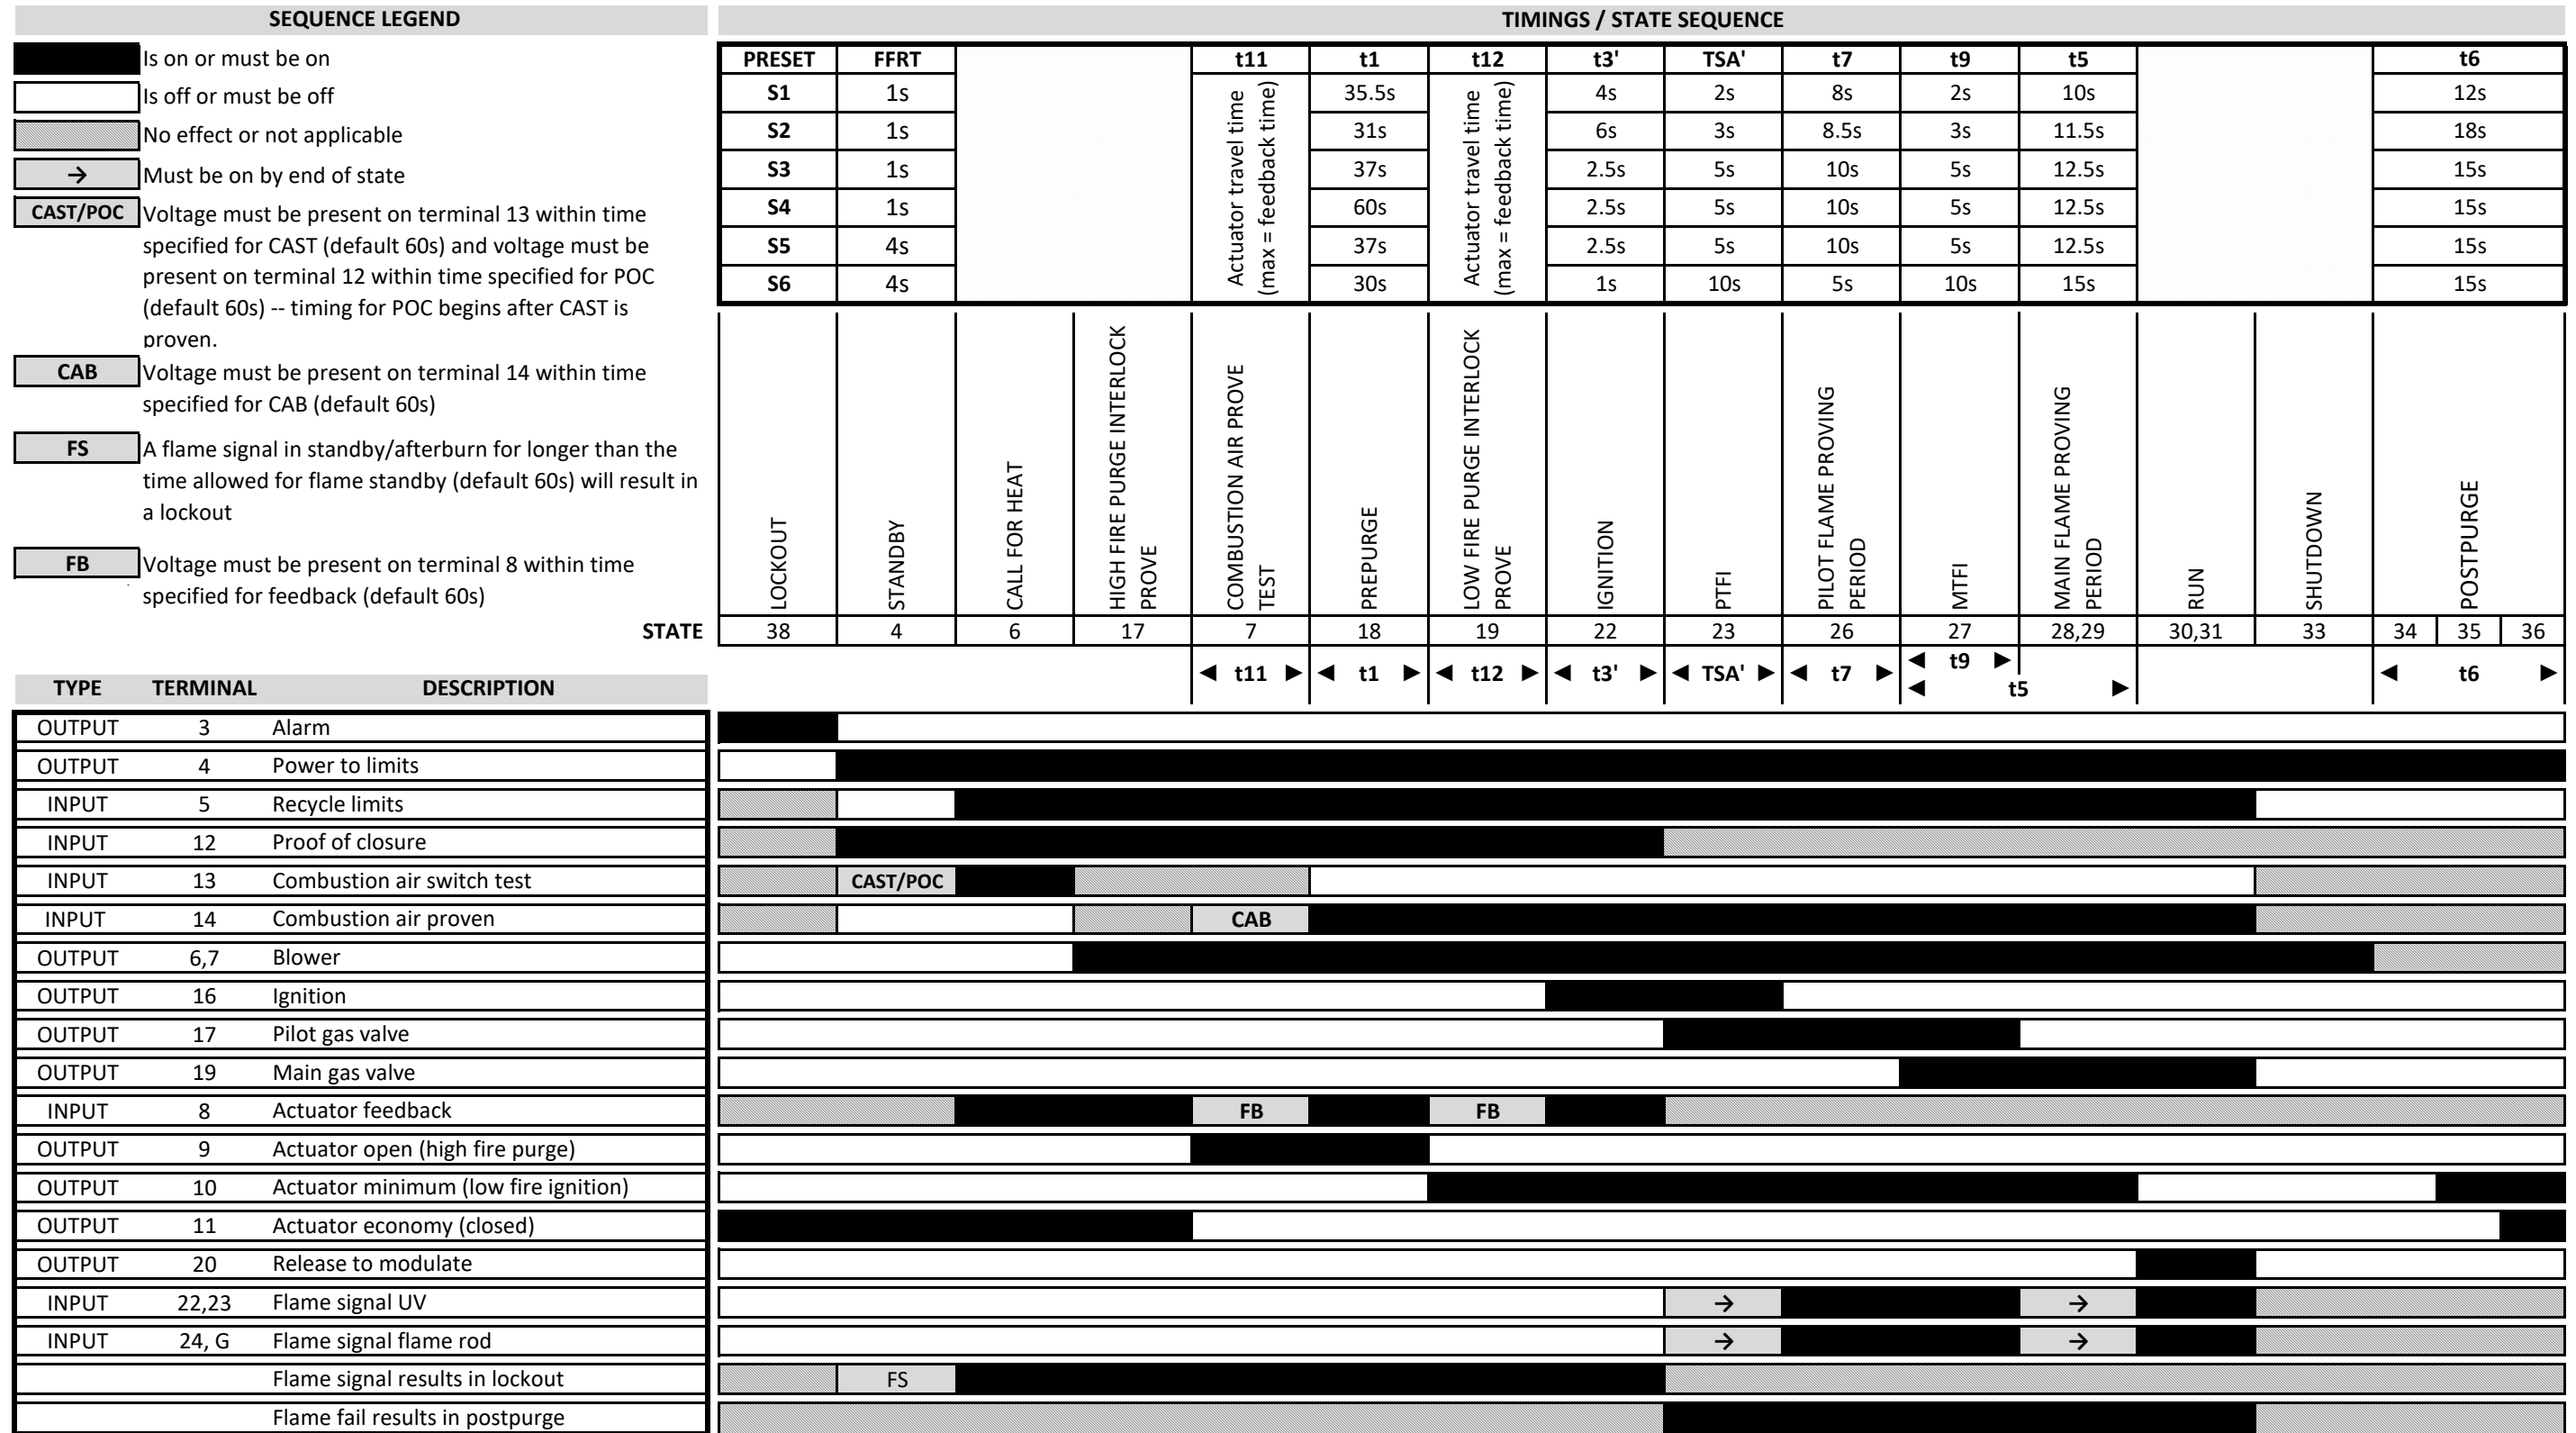


**BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Intermittent Pilot**

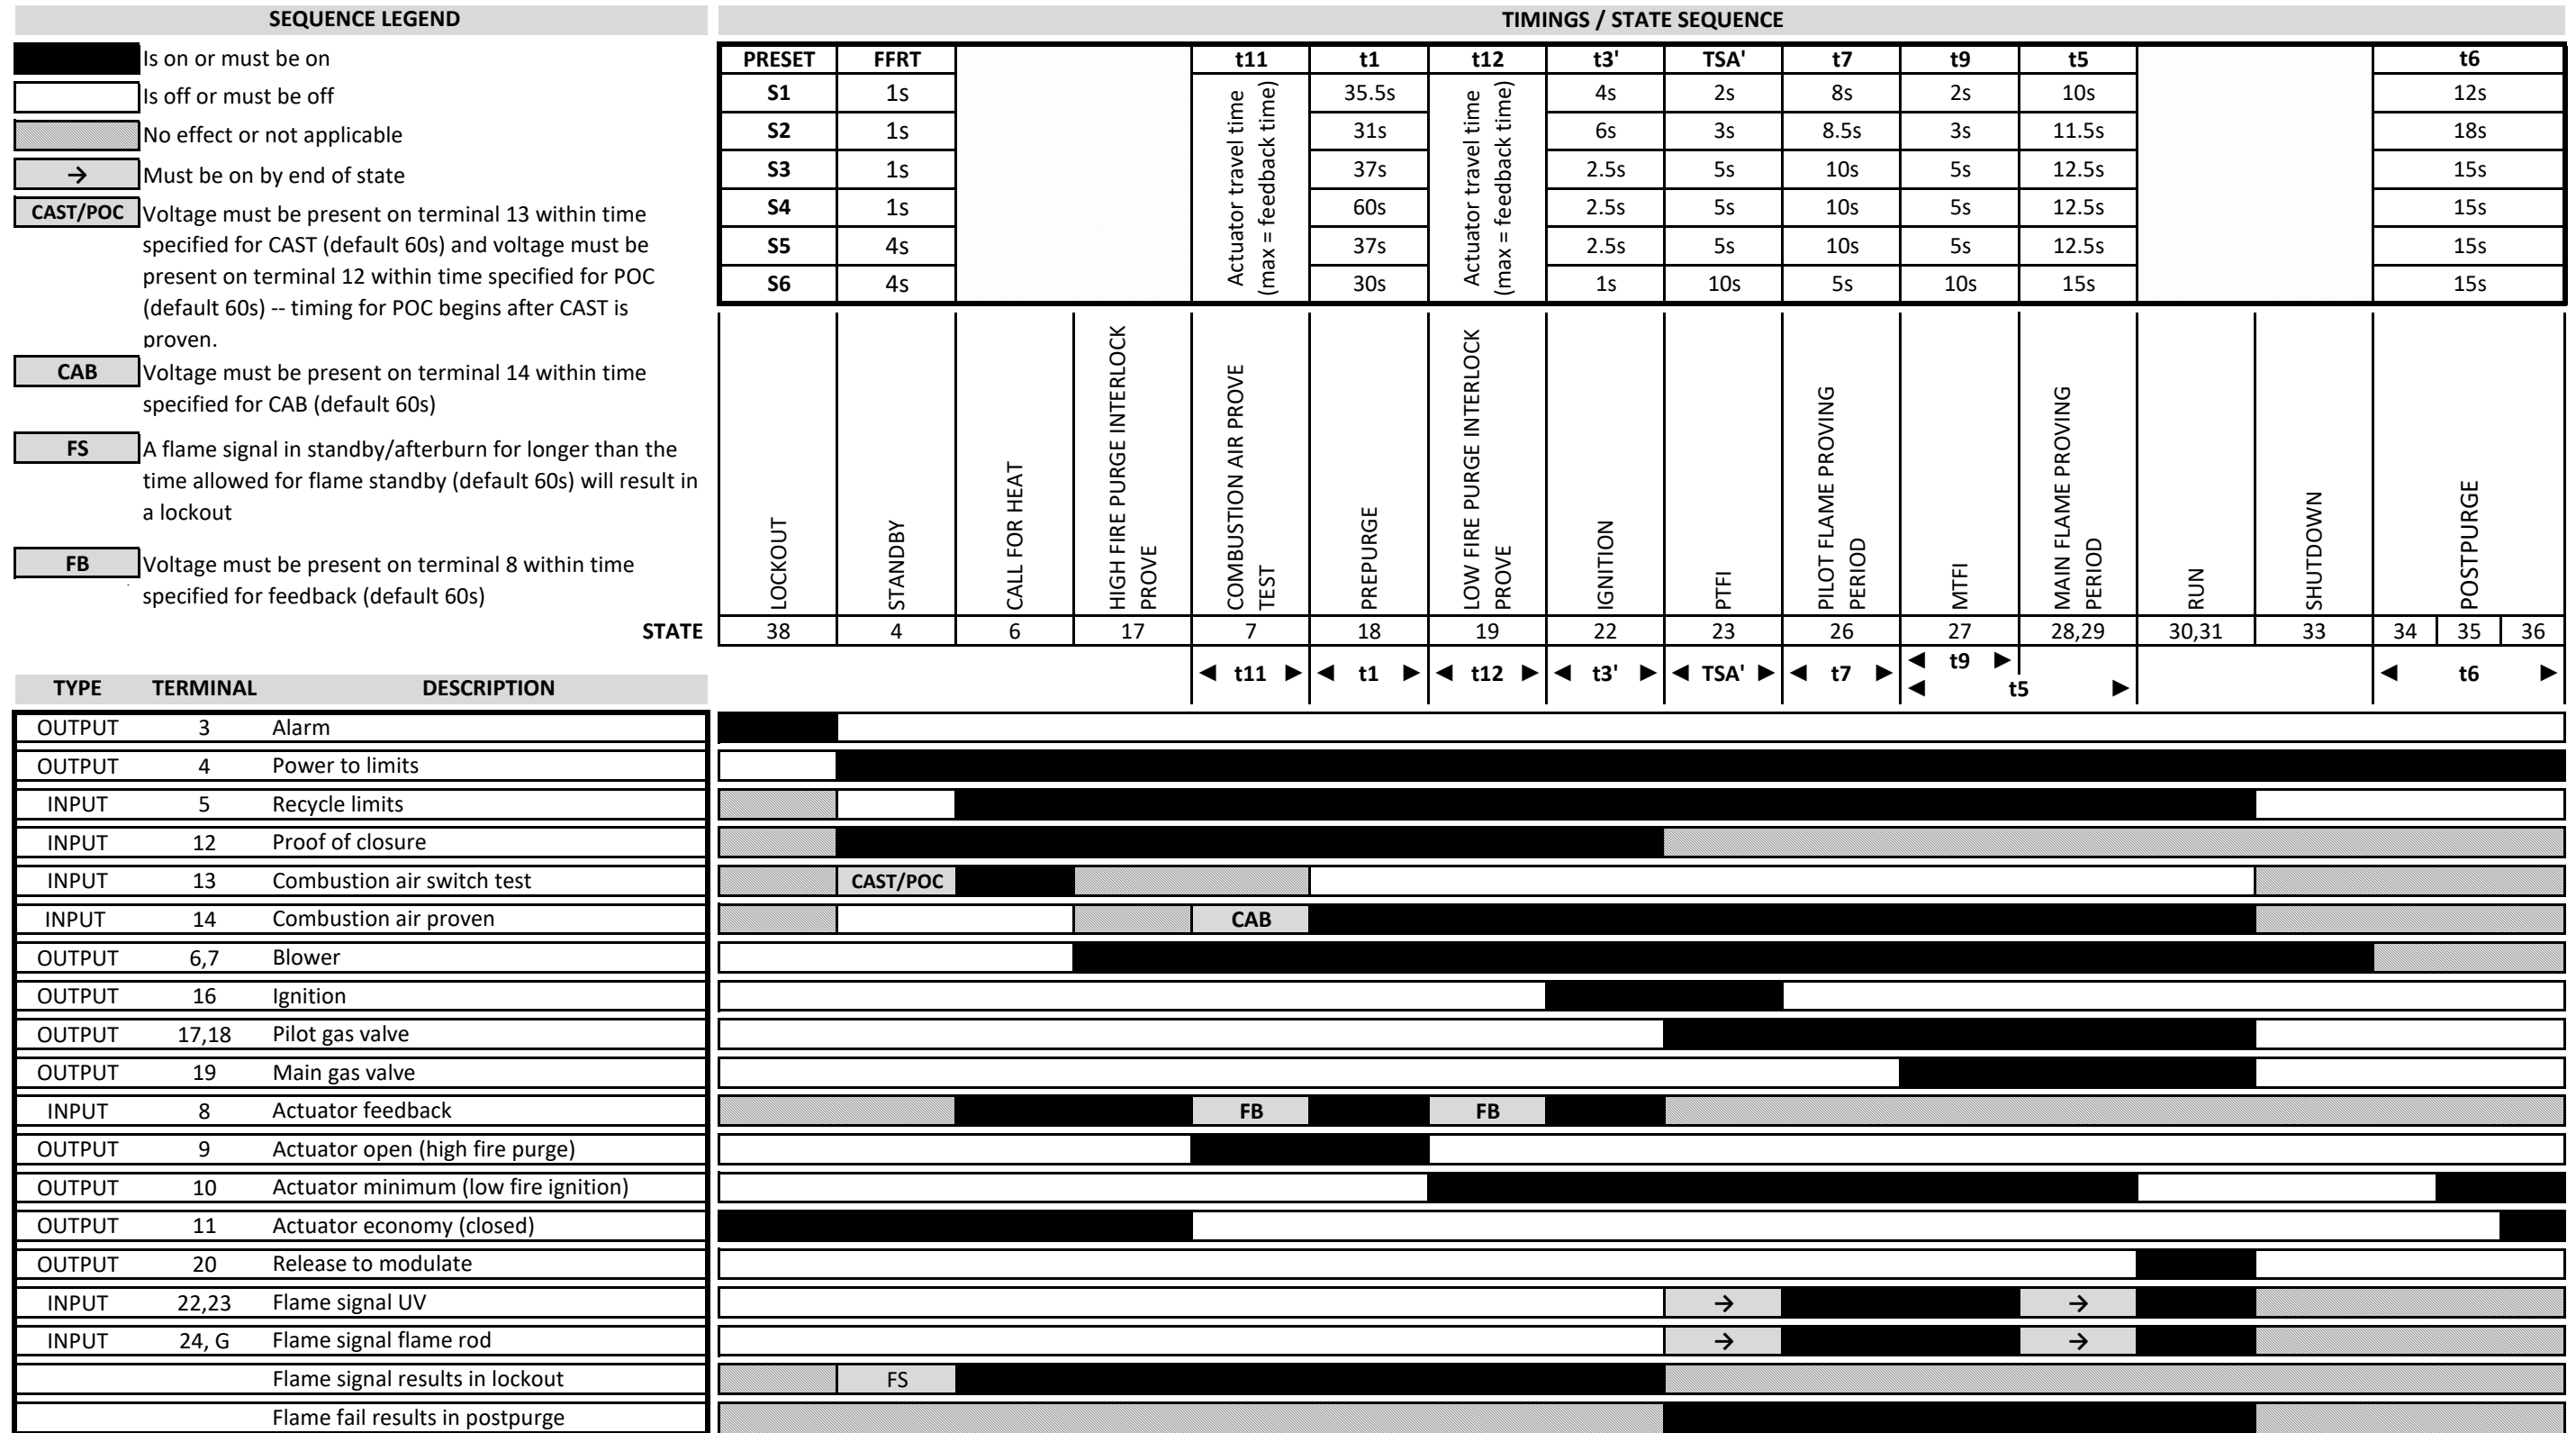


BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Direct Main

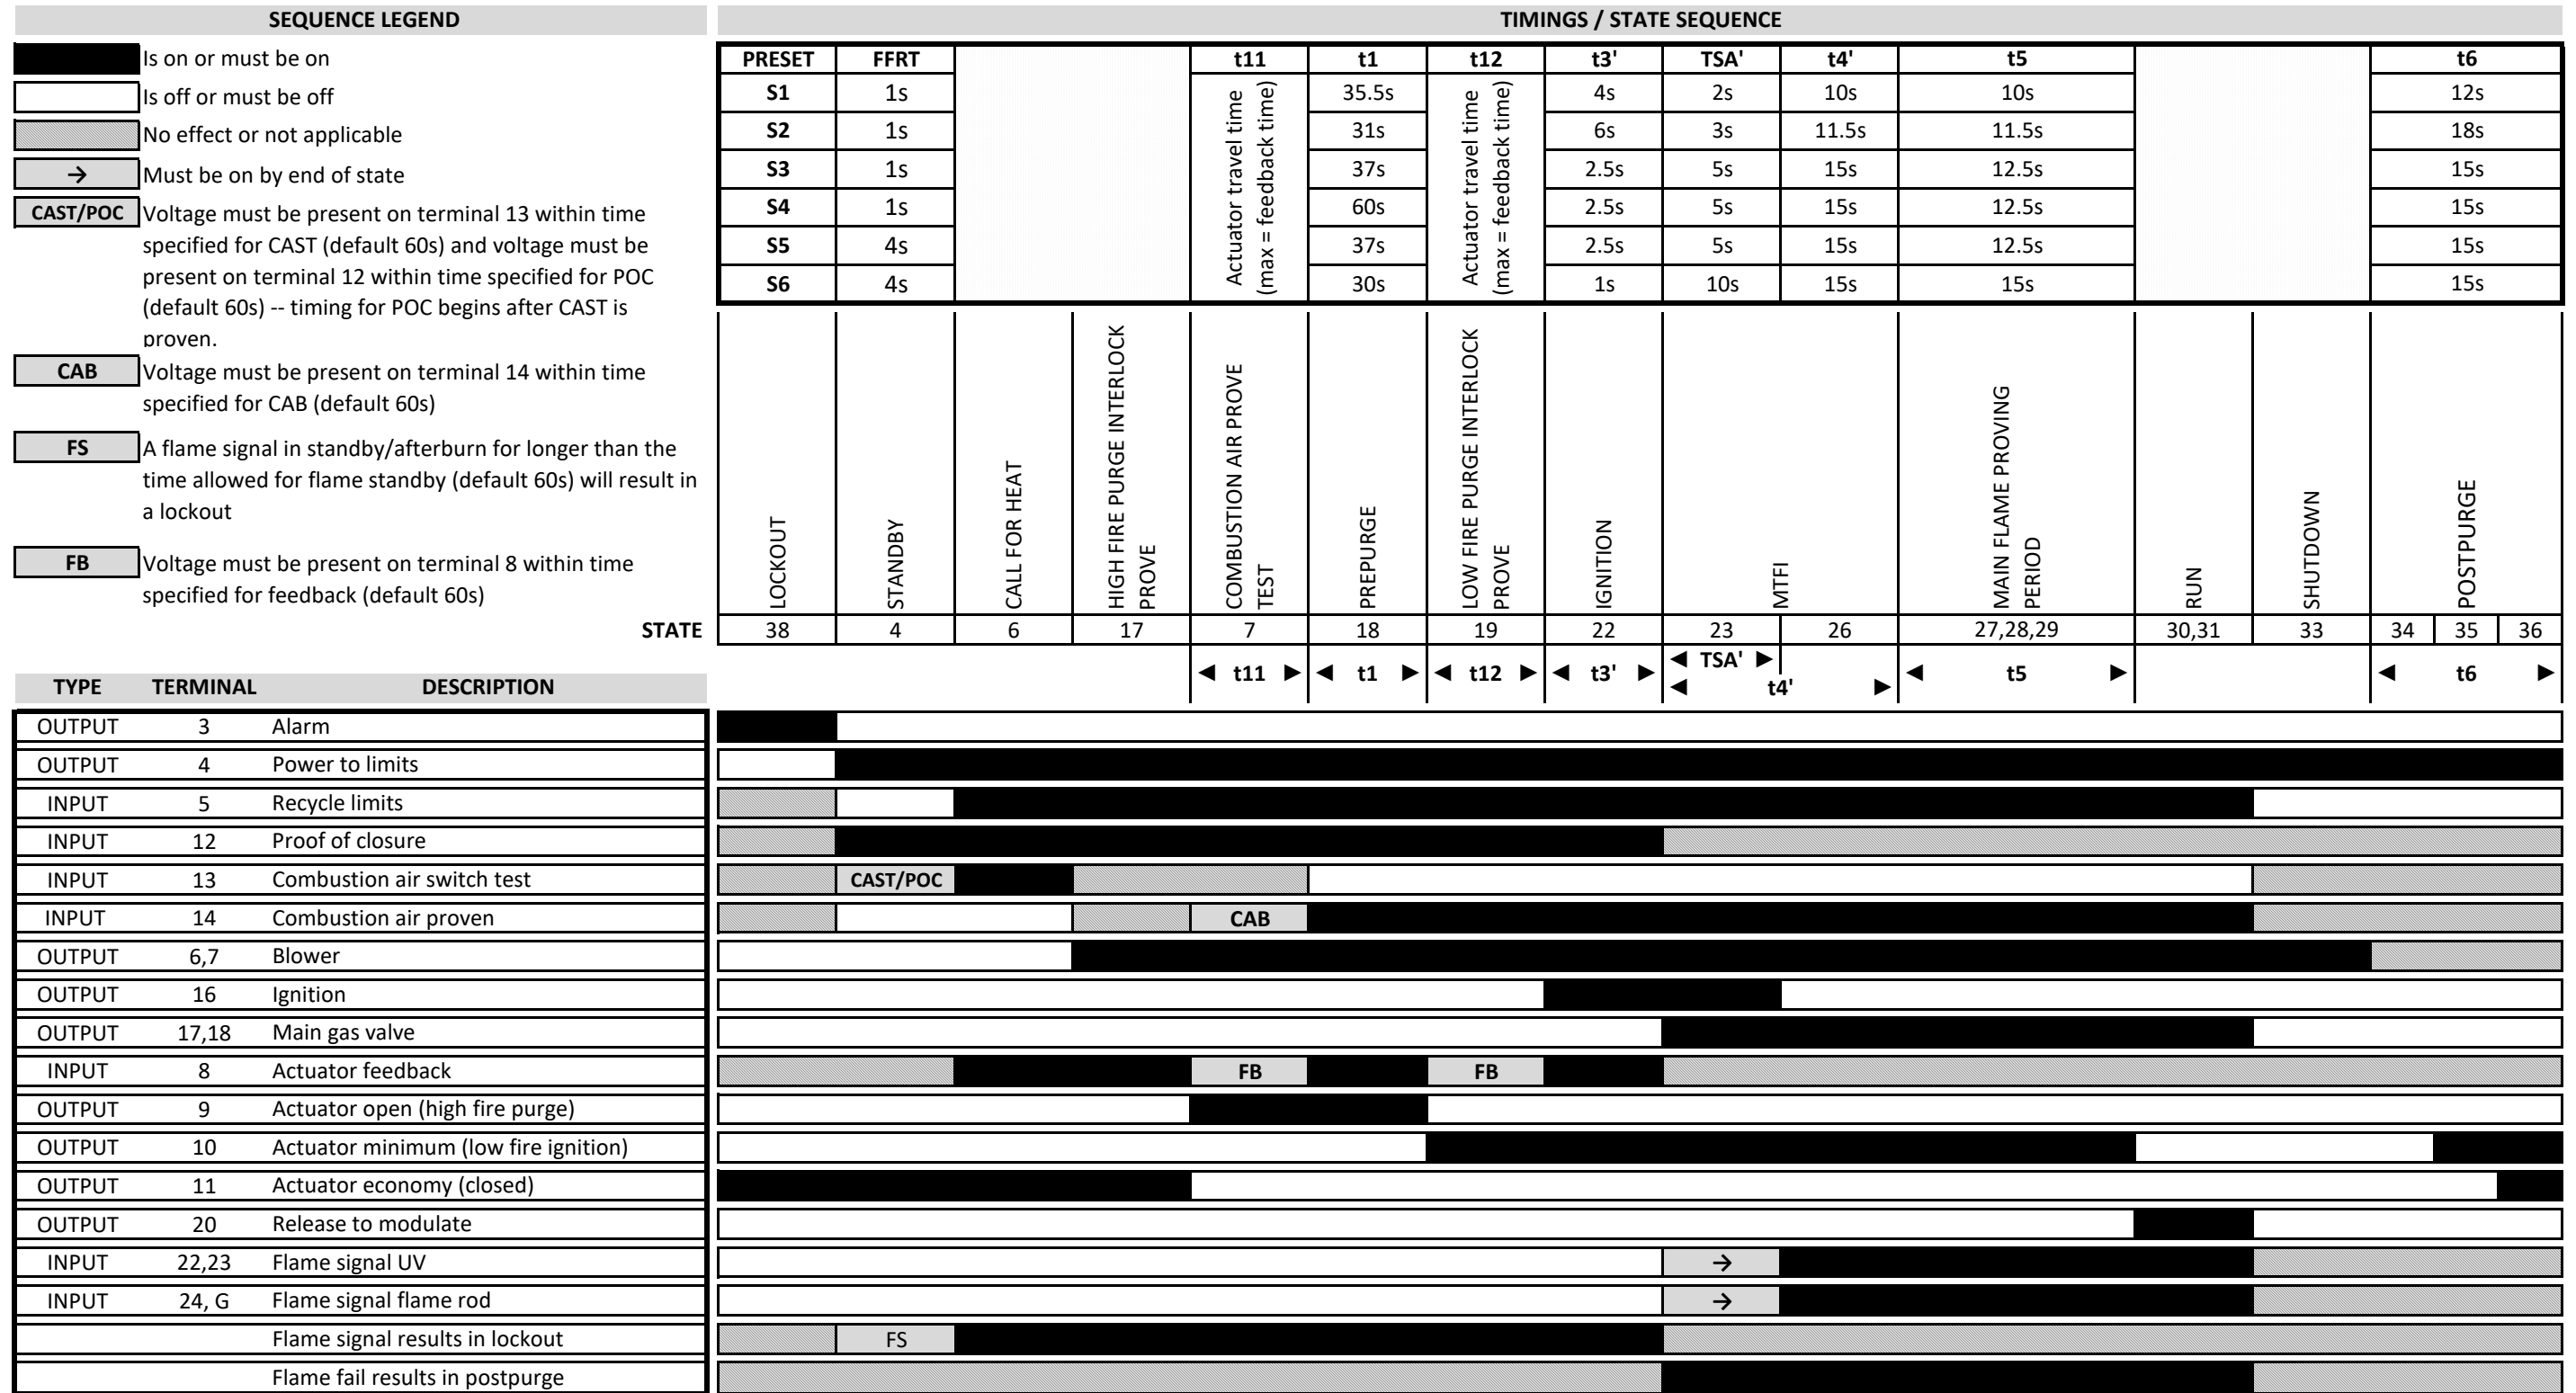

### BurnerPRO BP110UVFR-SxMP or BP230UVFR-SxMP (Valve Proving) with Interrupted Pilot

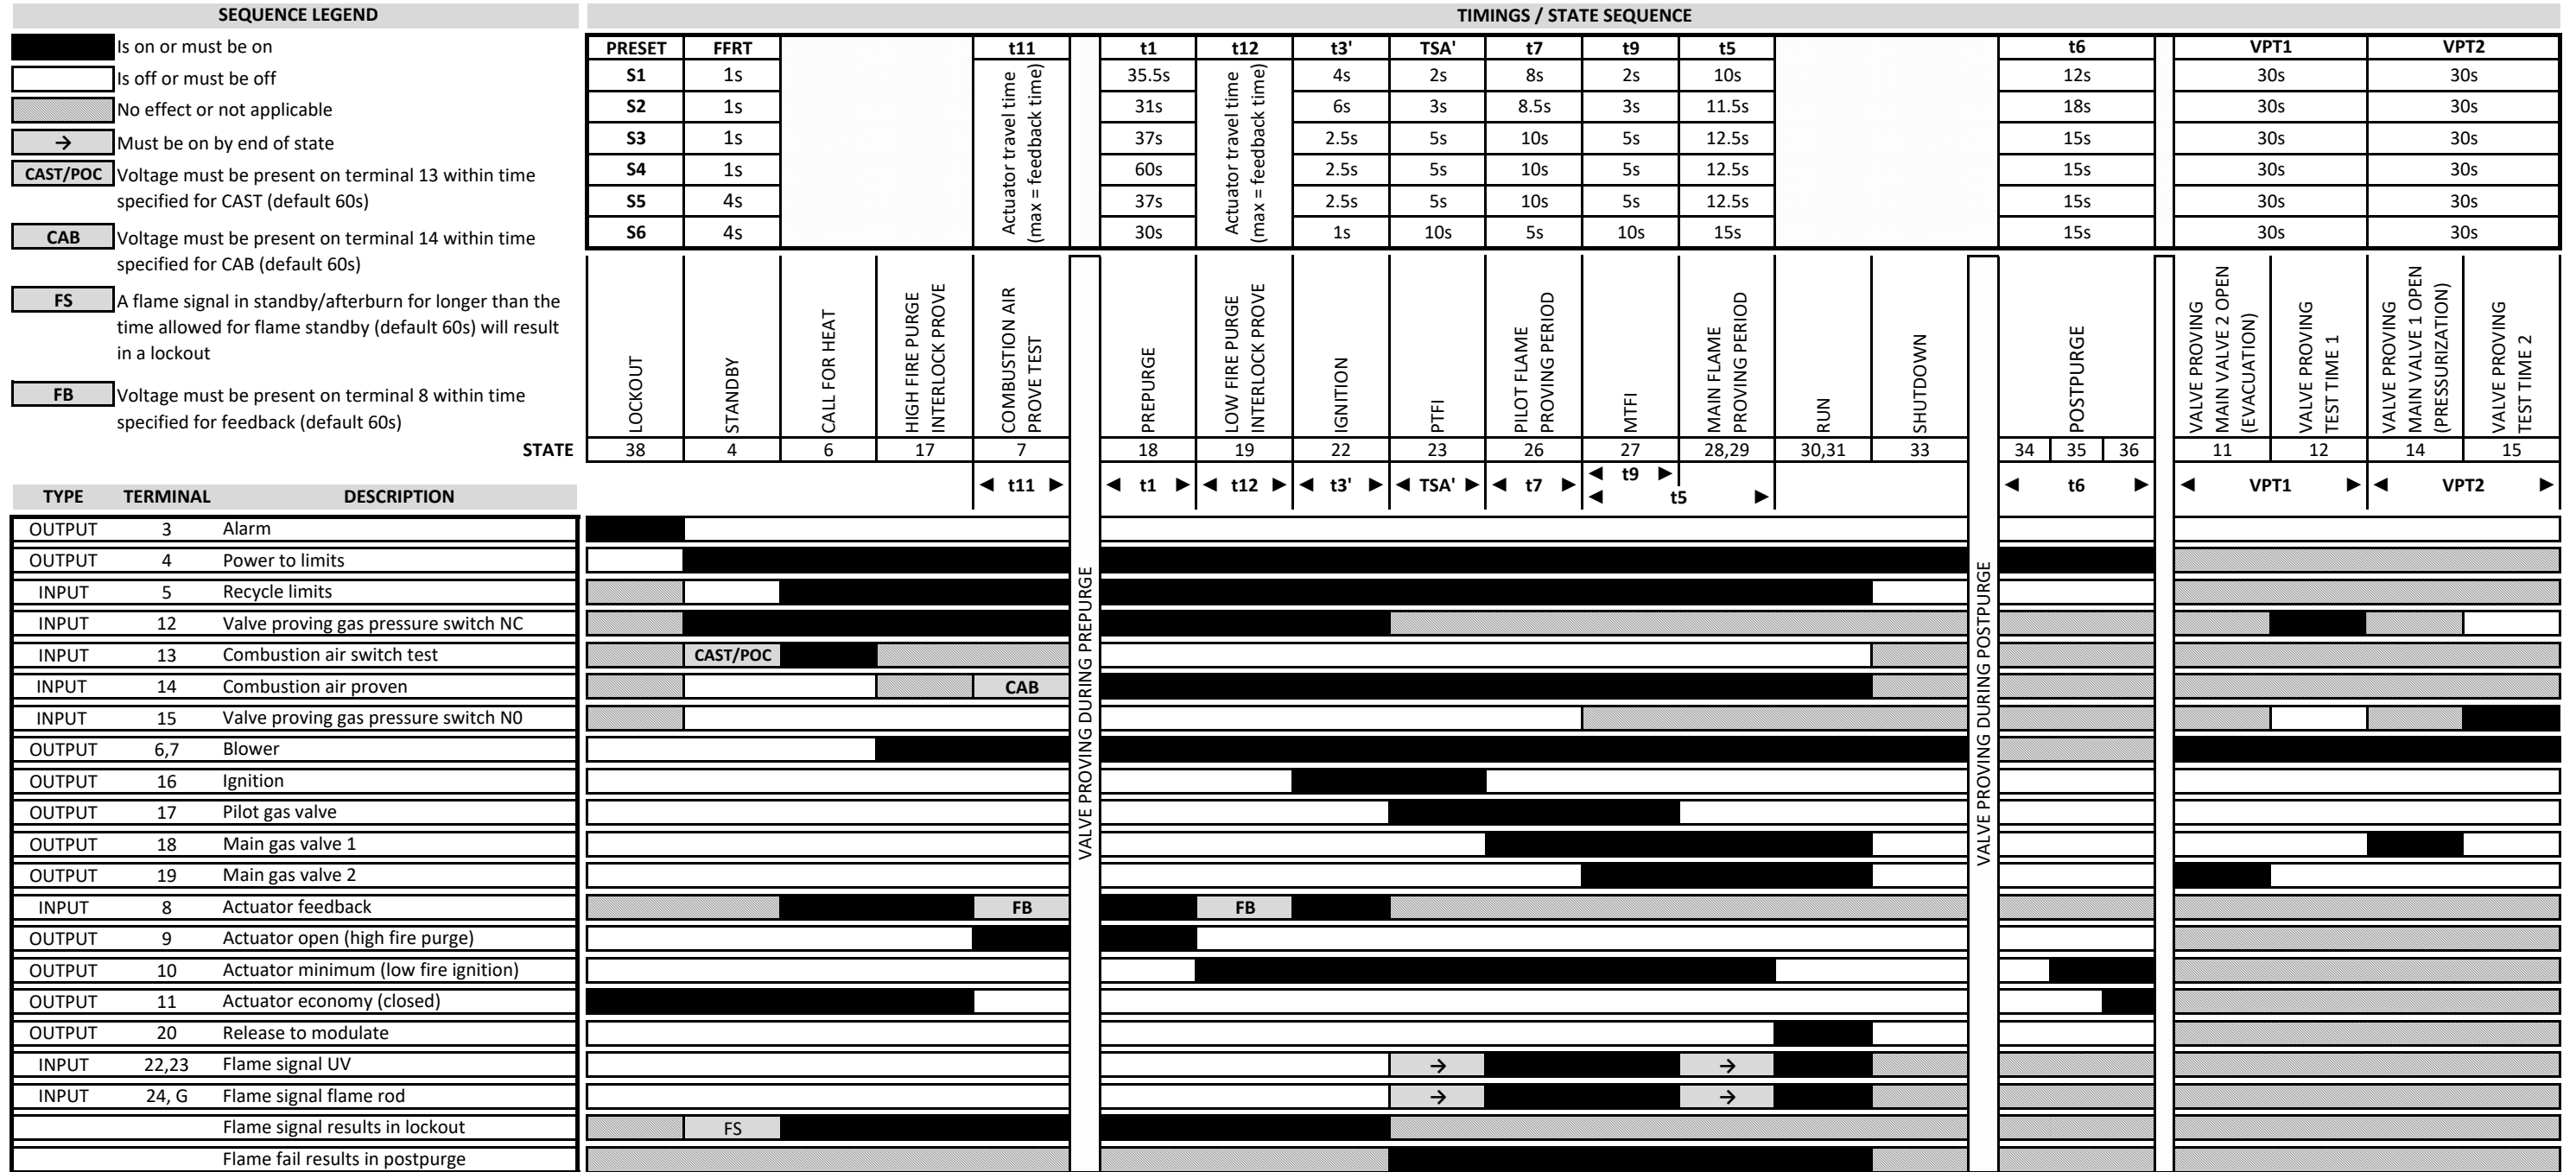


## BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Interrupted Pilot (Industrial Application)

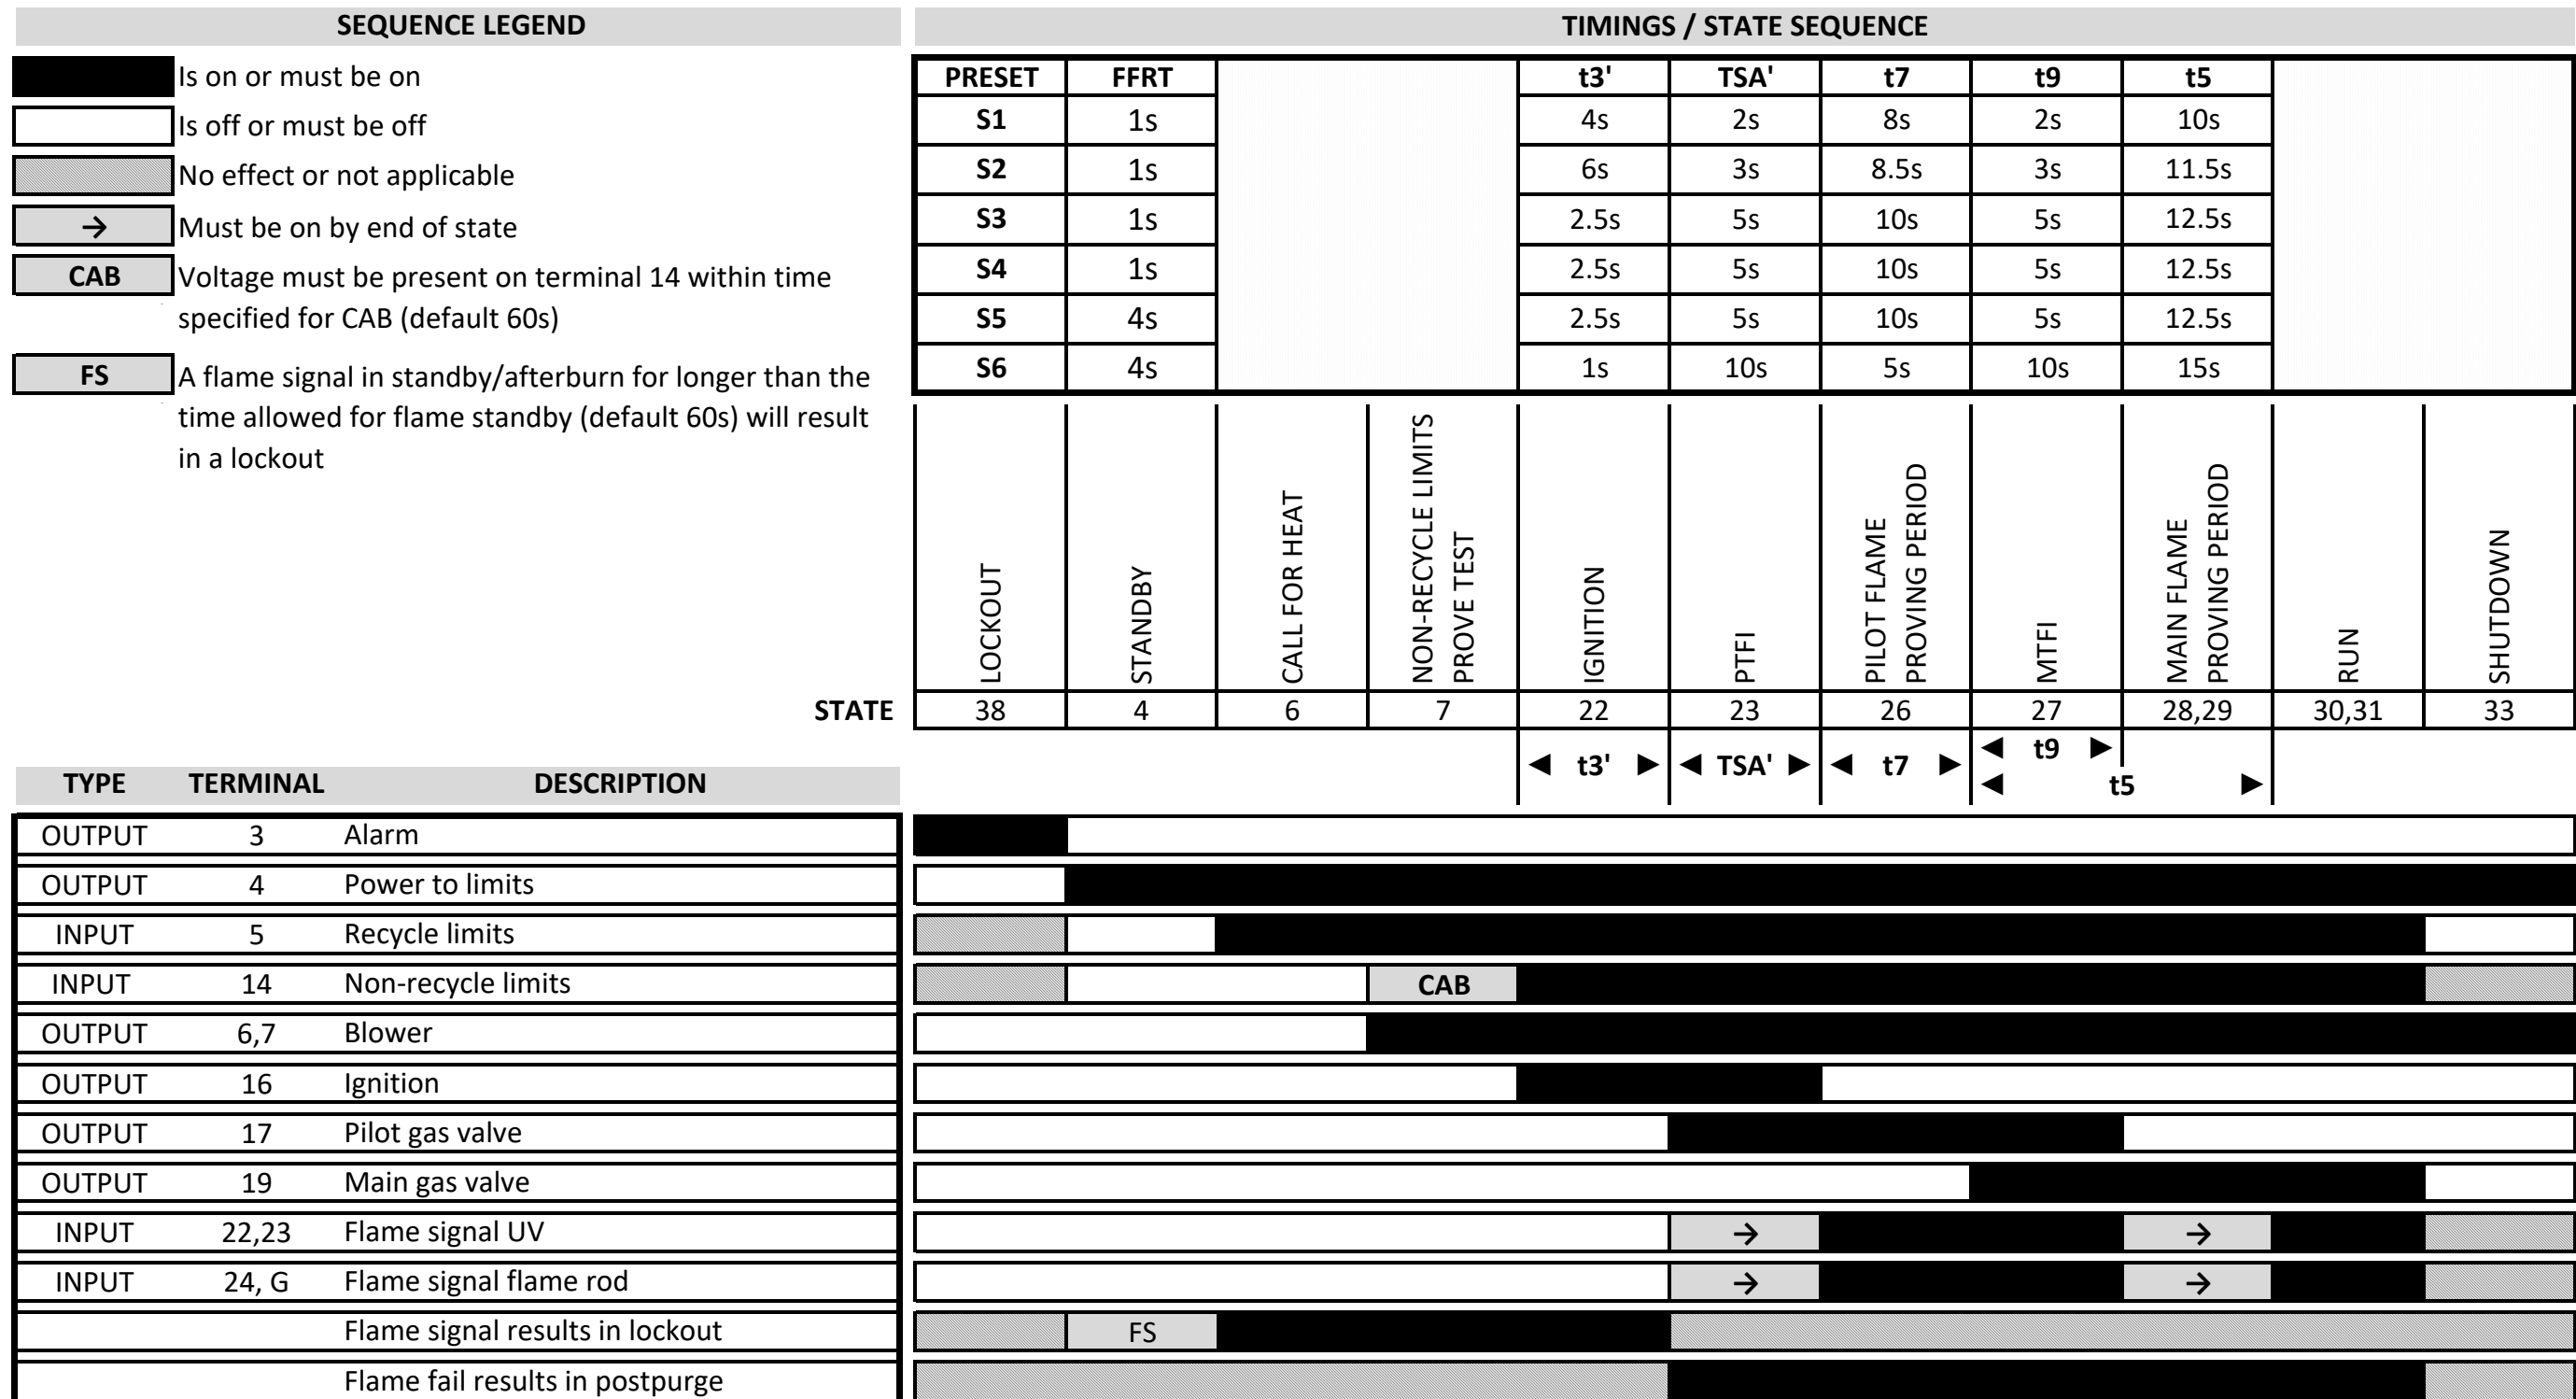


**WIRING NOTES:** Jumper terminal 11 to 12 to disable CAST (combustion air switch test), terminal 5 to 12 to disable POC (proof of closure), terminal 5 to 8 to disable actuator control and terminal 4 to 15 to disable purge. Optional: Jumper terminal 13 to 15 to disable prepurge only or terminal 14 to 15 to disable postpurge only.

## BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Intermittent Pilot (Industrial Application)

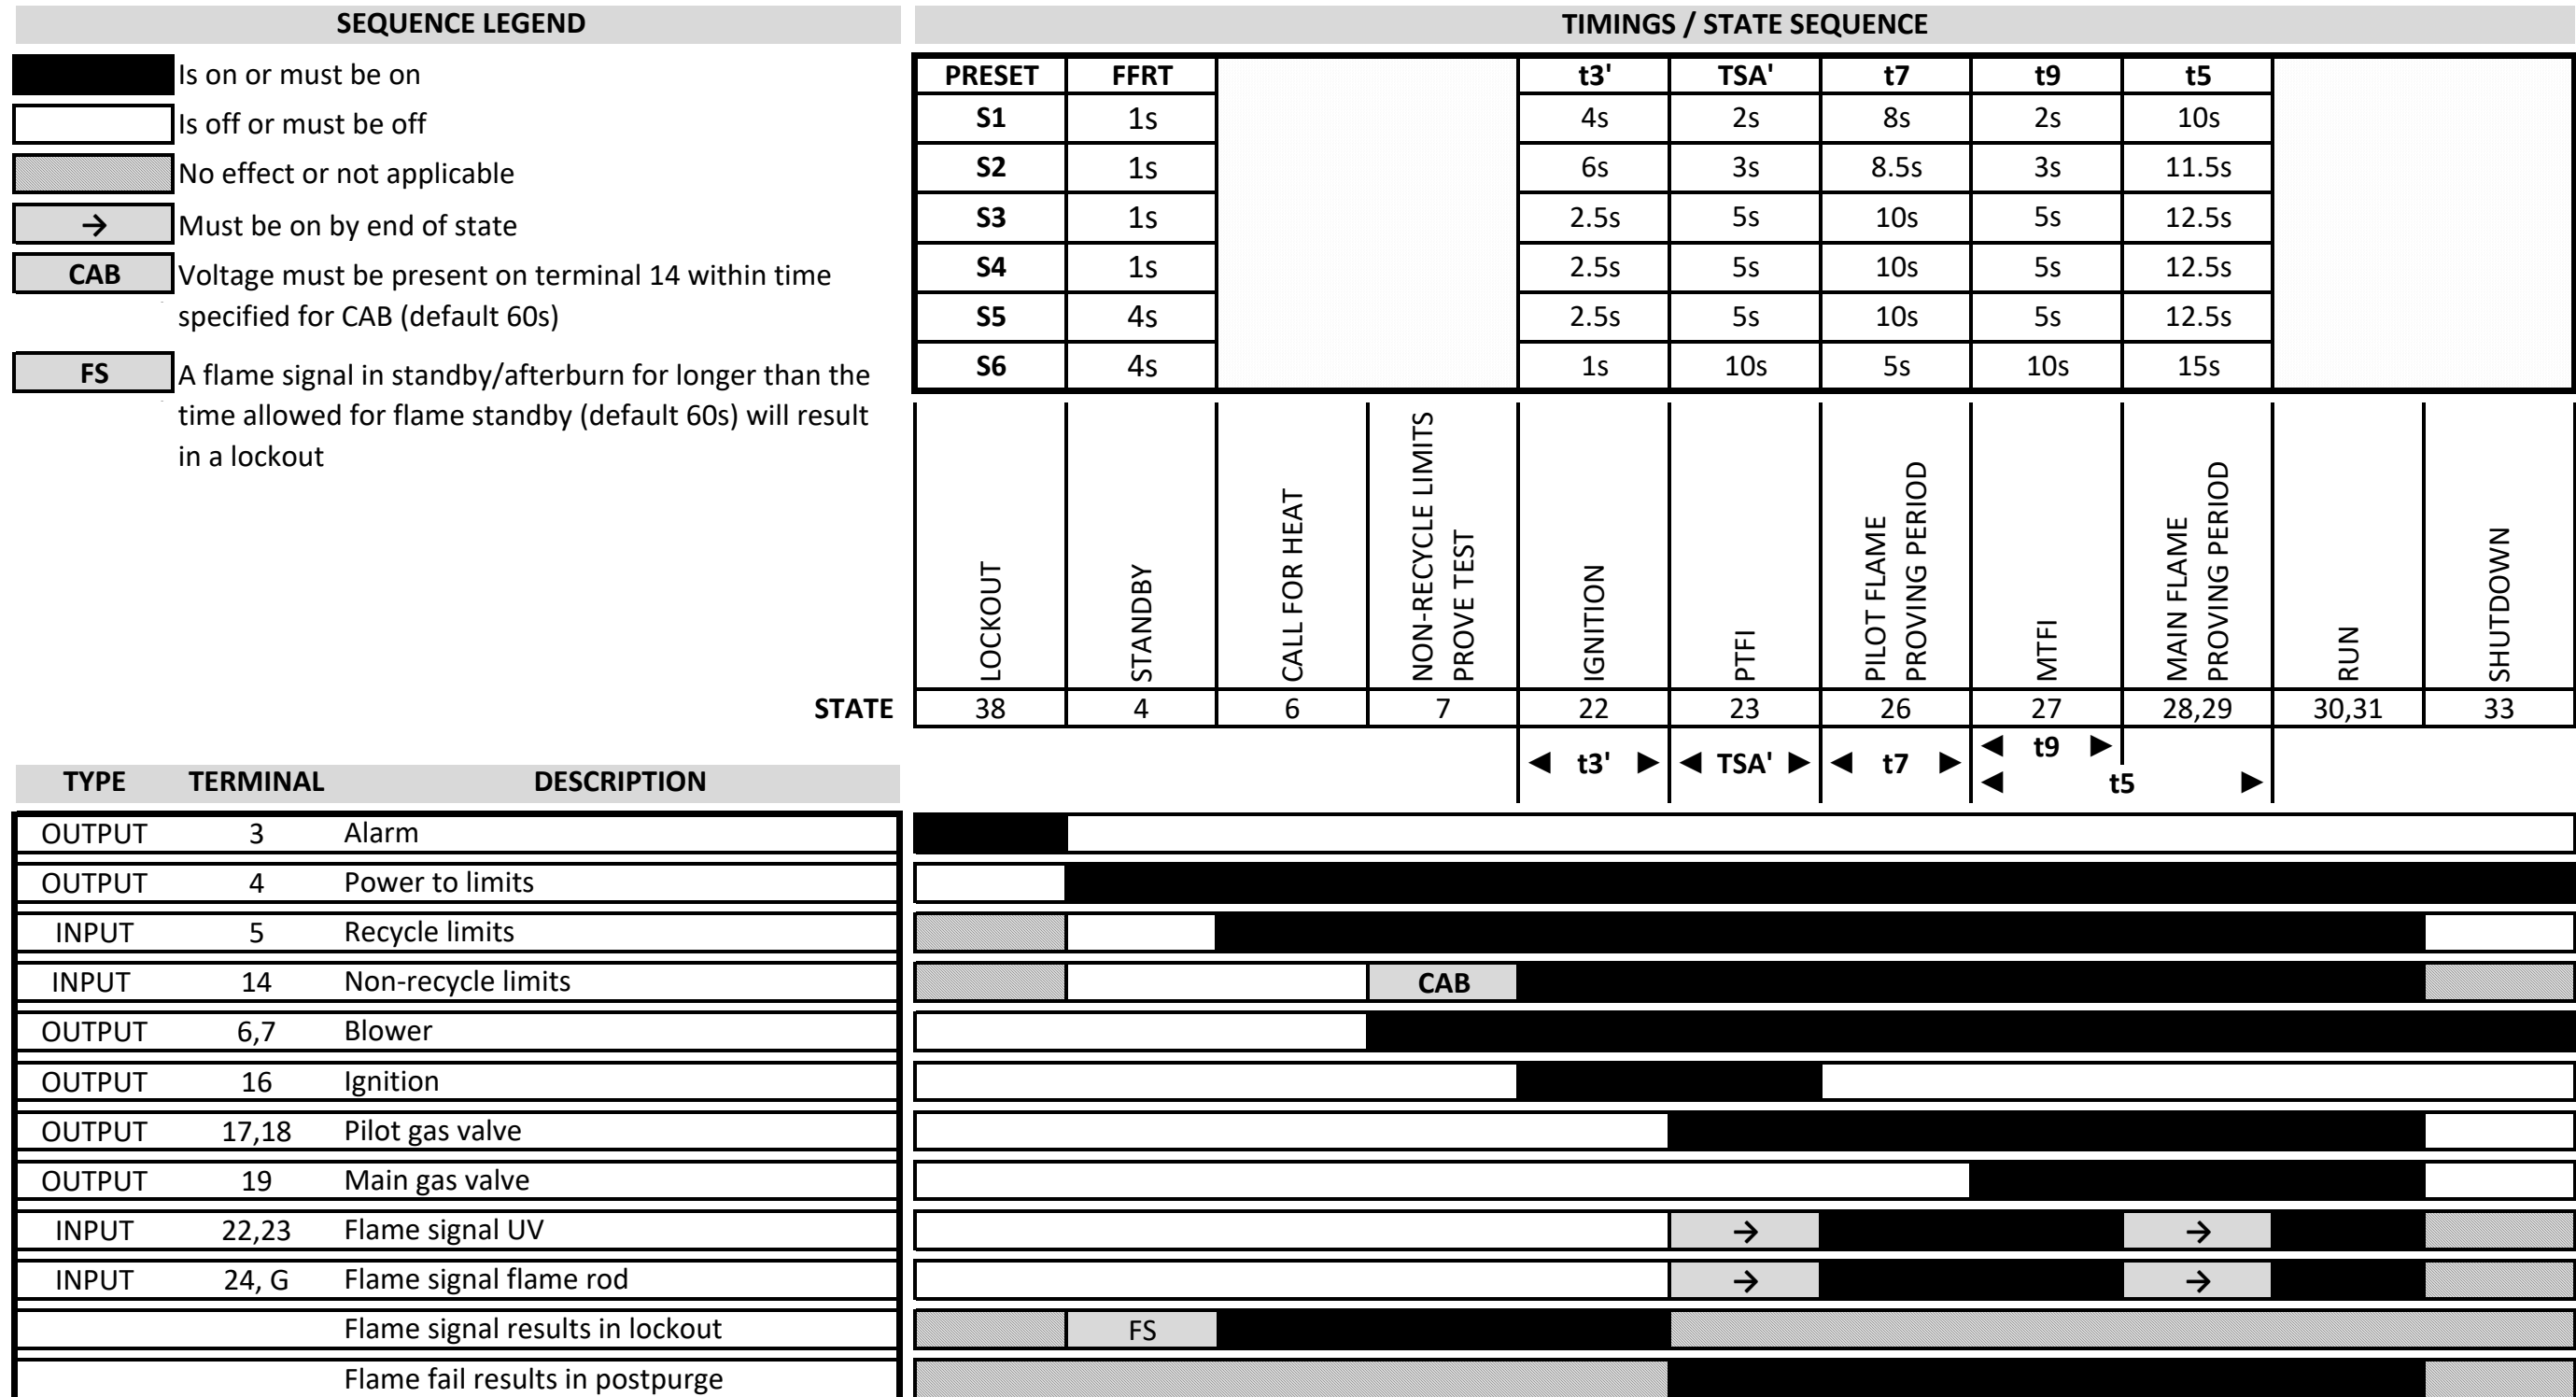

**WIRING NOTES:** Jumper terminal 11 to 12 to disable CAST (combustion air switch test), terminal 5 to 12 to disable POC (proof of closure), terminal 5 to 8 to disable actuator control and terminal 4 to 15 to disable purge. Optional: Jumper terminal 13 to 15 to disable prepurge only or terminal 14 to 15 to disable postpurge only.

## BurnerPRO BP110UVFR-SxM or BP230UVFR-SxM with Direct Main (Industrial Application)

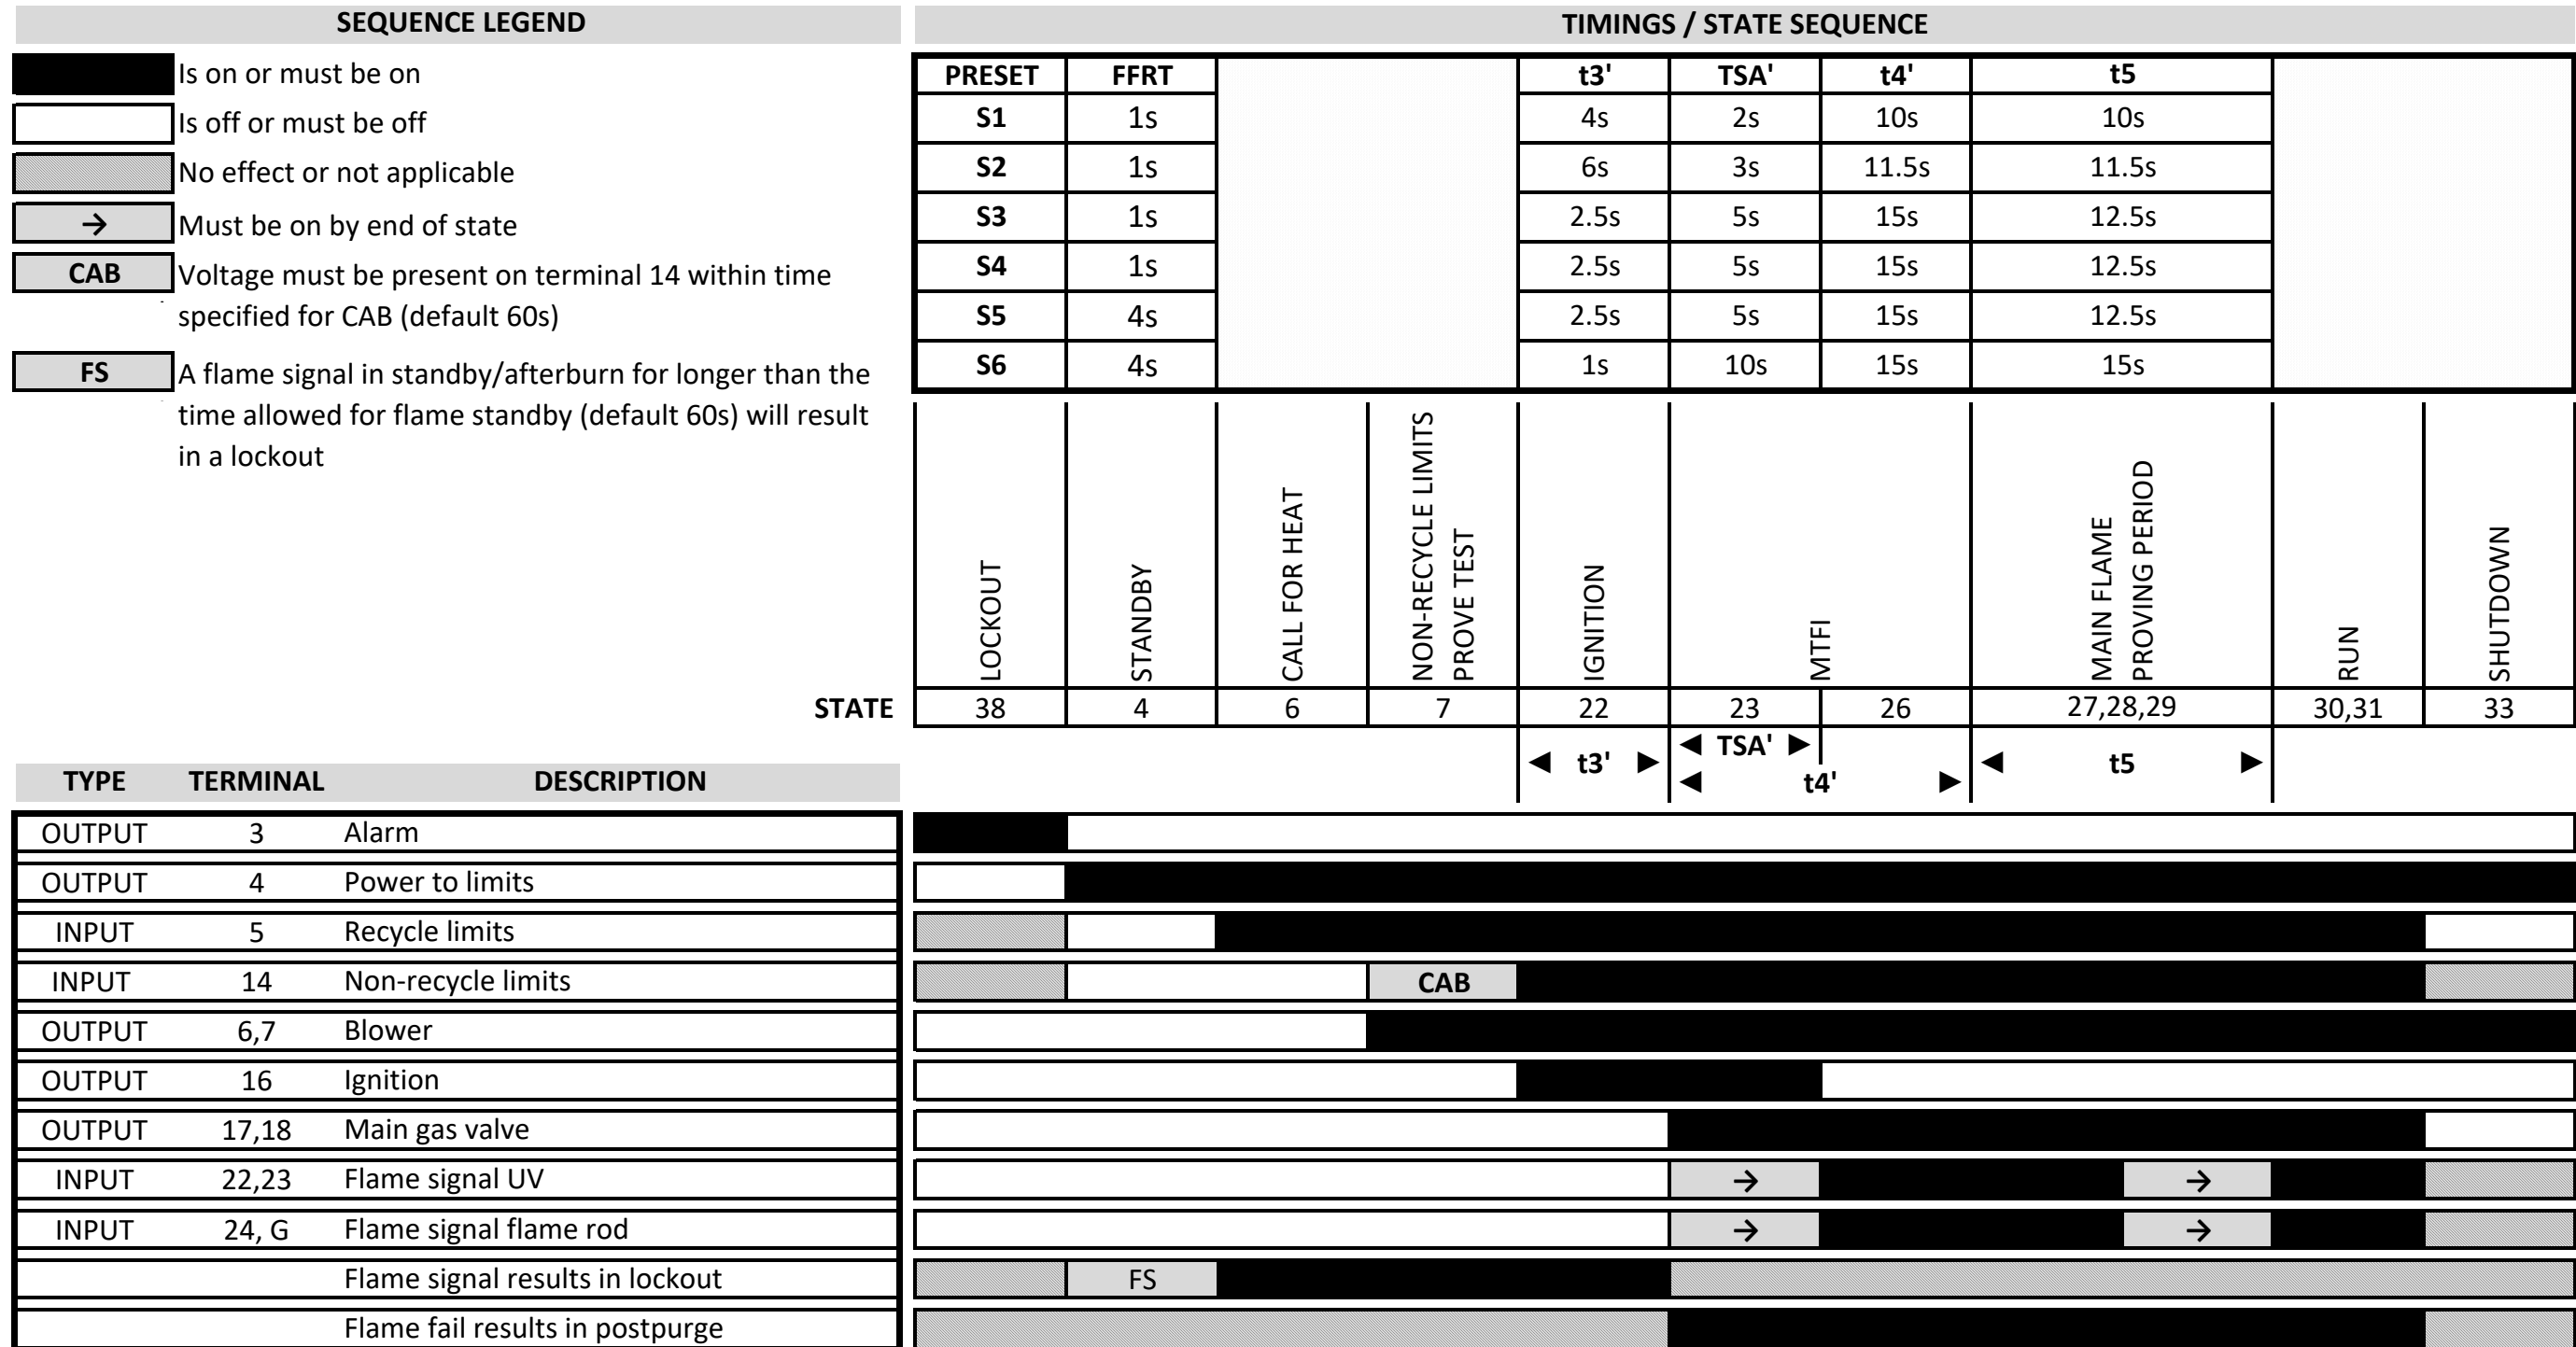

**WIRING NOTES:** Jumper terminal 11 to 12 to disable CAST (combustion air switch test), terminal 5 to 12 to disable POC (proof of closure), terminal 5 to 8 to disable actuator control and terminal 4 to 15 to disable purge. Optional: Jumper terminal 13 to 15 to disable prepurge only or terminal 14 to 15 to disable postpurge only.