

### 129-199 Field Wired Quick Disconnect 95DSS3 - 1WOC


133-798  
July 27, 2023

#### DESCRIPTION

The 129-199 field wired quick disconnect is designed to be used with the 95DSS3-1WOC where the end user selects which functions they wish to utilize.


#### CONTENTS

1. 3/4" Adapter
2. Gasket
3. Male quick disconnect & wires
4. Screws (4 total)
5. Plug, hole 1/2" NPT

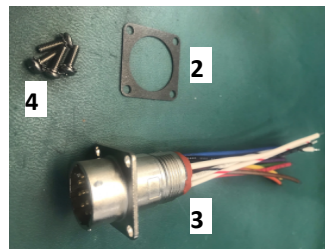

#### INSTALLATION

1. Install adapter into 3/4" opening of the 95DSS3-1WOC and torque to 88 in/lbs. If adapter is not parallel to housing, rotate clockwise as needed. Torque can exceed requirements to locate to parallel position. **Fireeye recommends the use of sealant on threads, such as Loctite 567 or equivalent.**
2. Slide gasket over wires of male quick disconnect (QD).
3. Insert wires of male QD through adapter making sure large keyway is set to 3:00 o'clock position.
4. Secure with 4 screws.
5. Install plug into 1/2" opening of the 95DSS3-1WOC.
6. Wire as needed per the table below.

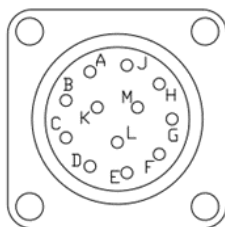

Viewed from behind

Pin	Adapter Color	59-497 Color
A	Black	Black/Red
B	White	White/Blue
C	White/Black	White/Black
D	White/Red	White/Red
E	Red	Red
F	Green	Pink
G	Violet	Violet
H	Grey	Grey/Red
J	Blue	Blue/Red
K	Yellow	Yellow
L	Brown	Brown
M	Orange	Orange

